
RM-450/RM-450CE

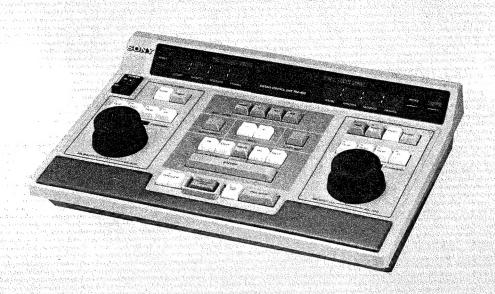

J Model UIC Model RM-450CE EK Model

エディティング コントロール ユニット EDITING CONTROL UNIT

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK A OR DOTTED LINE WITH MARK A ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

【修理上の注意】

製品の安全性を確保するために「電気用品取締法」に従って 修理する必要があります。

安全・性能維持のため、必ず指定の部品を ご使用下さい。



1.	SPECIFICATIONS 1-1 (E)	1	概略仕様	1-1	(J)
2.	FEATURES 2-1 (E)	2.	概要	2-1	(J)
3.	LOCATION AND FUNCTION OF CONTROLS 3-1 (E)	3.	各部の名称と働き	3-1	(J)
		4.	動作チェック及び不良箇所の発見		
4.	OPERATIONAL CHECK AND		1. 概要	4 - 1	(J)
	FAULT IDENTIFICATION		2. サービス治具(CPU基板のチェック時		
	1. General 4-1 (E)		に必要となります)		
	2. Service Tools (necessary for		3. 動作チェックの方法	4-3	(J.
	CPU board check) 4-1 (E)		•		
	3. Operation Check Procedure 4-3 (E)				
				_ 1	
5.	REMOVE THE RM-450 FROM RACK MOUNT (はずし方) …		`	5-1	
	A STATE OF THE STA				
6.	SEMICONDUCTORS (半導体外形図) 6-1. Semiconductors Pin Assignments			6-1	
	6-1. Semiconductors Pin Assignments 6-2. Semiconductor Lead Layouts			6-3	
	6-2. Semiconductor Lead Layouts			0 0	
۳,	DIAGRAMS (ダイヤグラム)				
1.	DIAGRAMS (タイヤクラム) 7-1. Block Diagram			7 - 1	
	7-2. Connections (接続図) ····································			7-3	
	7-3 CPIL-3 and AC-1 hoards		***************************************	7 - 5	
	7-4. DSP-1 Board			7 - 11	1
8.	EXPLODED VIEWS(分解図) ·······	•••••		8-1	
9	PARTS LIST (部品表) ········			9-1	•

1. SPECIFICATIONS

Automatic controls PREVIEW, AUTO EDIT/END

(Insert/ASMBL), RVW/JUMP,

LEARN

Player / Recorder : FF, STILL, Manual controls

REW, PLAY, search dail (1/30 to 10 times the normal playback

both in the forward and reverse

directions)

Recorder: REC, EDIT

IN and OUT points, possible on Frame modification

the player and / or recorder separately in the manual mode.

Digital time counter

Time code: 00:00:00:00 to

23:59:59:29(24)

CTL/RTC: +9:59:59:29(24)

to -9:59:59:29(24)

or 00:00:00:00

to 23:59:59:29(24)

(selectable)

Editing accuracy

Time code mode: ±0 frame

during synchronization

CTL mode: ±1 farme during

synchronization

Connectors

AC IN: 3-pin inlet

PLAYER/RECORDER:

9-pin/33-pin connectors

CUE OUT :

BNC connector, Active low

Low level 0 to 0.5 V

High level 3.5 to 5 V

REF. VIDEO IN:

BNC connector, 75Ω unbalance

Composite video signal 0.5 to

2 Vp-p

Composite sync input signal

0.5 to 5 Vp-p

Power requirements U/C AC 120 V ±10%,

50/60 Hz ±10%

AC 220 V - 240 V \pm 10%,

50/60 Hz ±10%

Power comsumption 11 W

Operating temperature

0°C to 40°C (32°F to 104°F)

approx. 390 × 93 ×265 mm Dimensions

(w/h/d)

 $(15\frac{1}{4} \times 3\frac{3}{4} \times 10\frac{1}{2} \text{ inches})$

approx. 3.1 kg (6 lb 113 oz) Weight . Optional accessories

33-pin to 33-pin remote control

cable

RCC-5F (5 m, 15 feet)

RCC-15FT (15 m, 45 feet)

(for extension)

9-pin to 9-pin remote control

cable

RCC-5G (5 m, 15 feet)

RCC-10G (10 m, 30 feet)

RCC-30G (30 m, 90 feet)

RMM-450 Rack mount metal

SU-450 Double side table

2. FEATURES

33-pin and 9-pin remote control connectors

These two types of remote connectors allow the unit to be used with various types of VTRs: Betamax, "BETACAM" and U-matic VTRs, and even a 1-inch helical scan VTR as follows:

Type of a VTR	Model name
Betamax VTR	SLO-383/420*
"BETACAM" VTR	BVW-10*, -40, -75 series
U-matic VTR	BVU-800, -900 series, VO-5800*/5850
1-inch helical VTR	BVH-2000, -3000 series

CTL/time code/RTC (relative time code) selection

When a VTR is connected through the 9-pin remote control connector, you can select a CTL signal, time code or RTC (relative time code) for editing. When RTC is selected, the time code is used as an edit reference and its progress is counted as CTL on the time counter. RTC can be used to determine how far the desired tape point is from the IN point as it can be reset in the same manner as a CTL.

Pinch on delay time learning capability

The unit can detect the pinch on delay time of the connected VTR and hold this data for a week even after the power is turned off. Therefore, the operation with the connected \text{VTRs} is very smooth and no discontinuity of the picture is produced by this unit.

Combination of the VTR having a 9-pin remote connector and ones having a 33-pin remote connector

You can connect not only the VTRs which have the same remote connectors but also VTRs having a 9-pin remote connector and those having a 33-pin remote connector to the unit, and control them remotely.

Various edit functions

In the assemble mode, the video signal and audio signals (A1 and A2) are edited together at the same time.

In the insert edit mode, they can be edited separately. The unit can also perform the split edit. Therefore, you can set the audio IN point independently from that of the video channel and vice versa. Materials you are to edit can be previewed and those that you have edited already can be reviewed.

Easy data pre-setting

You can easily preset various data, such as the preroll time and the edit timing, needed for editing on the front panel.

Quick tape access to the scene to edit

Variable speed of playback functions in the shuttle mode and jog mode enable you to locate the edit point more quickly.

Synchronization with the connected VTR

The REF.VIDEO IN connector allows the unit to synchronize with the connected VTR. Therefore, the unit can perform absolutely precise editing.

Control of the VTR with the dynamic tracking[®] function

When the VTR which has the dynamic tracking function is connected to this unit as the player VTR, this unit can edit the picture in the variable speed.

Error indications

The unit indicates the error by displaying the error number on the time counter and outputting a warning sound. You can understand right away what kind of error has occurred and what you should do.


Rack mountable

The unit can be mounted on the RMM-450 rack mount metal which is designed for a standard 19-inch rack, and on the SU-500 series system console by using the SU-450 double size table.

^{*} The BVW-10 is a player, and other VTRs cannot be used as a recorder when connected to this unit.

3. LOCATION AND FUNCTION OF PARTS AND CONTROLS


Connector Panel

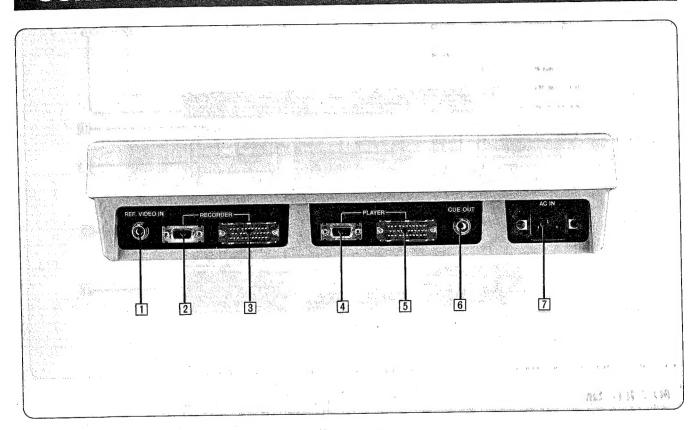

- 1 REF.VIDEO IN connector (BNC type)
 Supply the reference signal to this connector.
- 2 RECORDER 9-pin connector

 Connect to the 9-pin remote connector of the recorder with an optional remote control cable.
- 3 RECORDER 33-pin connecter
 Connect to the 33-pin remote connector of the recorder with an optional remote control cable.
- 4 PLAYER 9-pin connector
- 5 PLAYER 33-pin connector
- 6 CUE OUT connector (BNC type)
 The output signal from this connector can be used as a tally signal.
- 7 AC IN connector Connect to the AC outlet with the supplied AC power

Control Panel

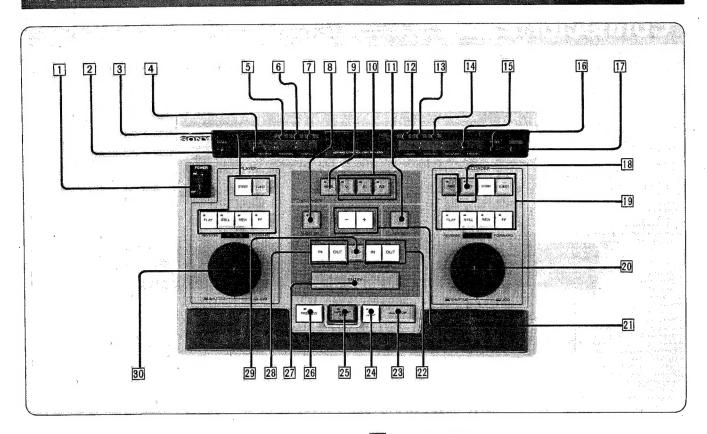

1 POWER switch

ON: Set to this position to turn on the power. **OFF:** Set to this position to turn off the power.

2 PLAYER RESET button

Press this button to reset the time counter and the entered edit points.

3 PLAYER button group

The function of these buttons is the same as those on the player VTR.

STDBY (Standby) button

EJECT button

PLAY button

STILL button

REW (Rewind) button

FF (Fast Forward) button

4 Time counter for the player

The unit counts the CTL pulses or time code on the tape of the player and displays the result in hours, minutes, seconds and frames.

Error messages are also displayed here when errors occur.

5 PLAYER SERVO indicator

This indicator lights when the servo-mechanisms of the player are not locked during the automatic editing and preview operation.

6 PLAYER IN indicator

When the IN point of the player VTR is entered, this indicator lights.

7 PLAYER OUT indicator

When the OUT point of the player is entered, this indicator lights.

8 AUDIO SPLIT button

Press this button and make it light to enter the audio IN point during the split editing.

9 ASMBL (Assemble) button

Press this button for assemble editing.

10 INSERT select buttons

These buttons select the input signal during insert editing.

11 LAST EDIT button

This button recalls the previous edit points on the time counter.

- 12 RECORDER IN indicator
- 13 RECORDER OUT indicator
- 14 RECORDER SERVO indicator
- 15 Time counter for the recorder
- 16 RECORDER RESET button
- 17 TOTAL button and lamp

The lamp blinks when the button is pressed. Then press the RECORDER RESET button 16 to reset the time counter of the recorder to 00:00:00:00, so that you can know the tape running time from after that point.

18 EDIT button

For manual editing, press this button and the PLAY button 19 simultaneously. When only this button is pressed, the picture from the player will be monitored on the recorder monitor.

19 RECORDER button group

The function of these buttons is the same as those on the recorder VTR.

REC (Record) button

STDBY (Standby) button

EJECT button

PLAY button

STILL button

REW (Rewind) button

FF (Fast Forward) button

20 Search dial and direction lamps for the recorder

This dial enables you to locate edit points. Push in to change from the shuttle mode to the jog mode and push it again to return to the shuttle mode.

21 TRIM +/- button

Hold this button down while pressing the IN or OUT button 22 28 to change the edit points frame by frame.

22 RECORDER IN/OUT buttons

Press either button with the ENTRY button [27] simultaneously to enter the IN or OUT point for the recorder.

23 ALL STOP button

Press this button to stop the tape of the recorder and the player.

24 RVW/JUMP button

Press this button to review the edited picture.

Only the recorder operates in the same manner as during editing. Press the button during review operation to locate the OUT point of the recorder.

25 AUTO EDIT/END button

Press this button to set the recorder in the automatic edit mode. When you press this button during editing, the unit regards the tape point where you pressed this button as the OUT point, and finishes editing.

26 PREVIEW button

This button is used for editing rehearsal. The picture you are to edit can be monitored before actual editing.

27 ENTRY button

Press this button with the IN or OUT button 22 28 to enter the IN or OUT point.

- 28 PLAYER IN/OUT buttons
- 29 GO TO button

Press this button with the IN or OUT button 22 28 to locate the IN or OUT point.

30 Search dial and direction lamps for the player


STDBY button

This button makes the VTR shift to the standby off mode only.

EJECT button function

When you connect the VTRs through the 33-pin connector, the eject function cannot operate with the EJECT button.

Inside Panel

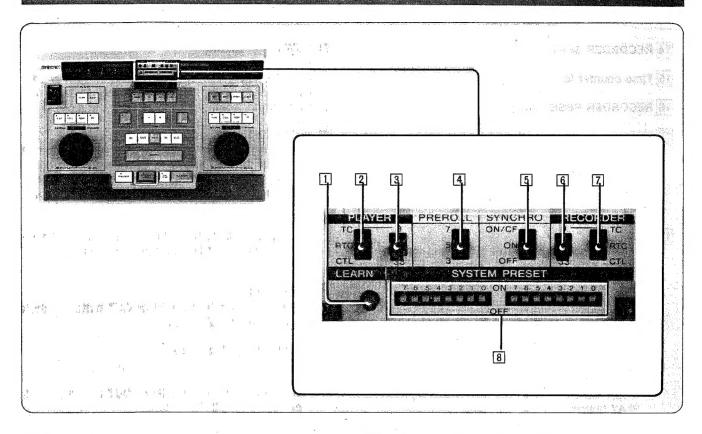

1 LEARN button

Press the button to detect the pinch on delay time of the connected VTRs after turning on the unit.

2 PLAYER TC/RTC/CTL selector

Selects the time data displayed in hours, minutes, seconds and frames on the respective time counter.

CTL: Time period of tape travel by counting CTL pulses.

RTC: RTC (Relative Time Code), which is counted as a time code, but can be displayed like CTL.

TC: Time code

3 PLAYER 9-pin/33-pin selector

Selects the VTR to be controlled: the VTR connected to the PLAYER 9-pin connector or the VTR connected to the PLAYER 33-pin connector.

4 PREROLL selector

Selects the preroll time: 3, 5, 7 (10) seconds.

Preroll time selection

When you set the PREROLL selector 4 to 7, the actual preroll time depends on bit 7 of the left DIP switches 6 on the inside panel.

5 SYNCHRO (Synchronization) selector

Selects the way to synchronize by frame pulse.

ON/CF: When you connect the VTR having a 9-pin remote connector to this unit, select this setting. This unit counts color frames to synchronize the player and the recorder.


ON: Synchronizes the recorder and the player regardless of the color frame.

OFF: Does not control synchronization.


Notes

- When an SLO-383 or SLO-420 is connected, you may not be able to synchronize this unit and it.
- Even if you select the ON/CF position with this selector, no color frame can be counted when the VTR is connected through the 33-pin connector.
- 6 RECORDER 9-pin/33-pin selector
- 7 RECORDER TC/RTC/CTL selector

8 SYSTEM PRESET DIP switches
The default bits setting is all off (0) as illustrated below.



Bit	Meaning		
7	Maximum preroll time is set. When this bit is set to ON, the preroll time is set to 10 seconds even though the PREROLL selector is set to 7 seconds. ON: 10 sec. OFF: 7 sec.		
6	The entry of the edit point resets the time counter to 00:00:00:00 automatically. This bit is available when CTL or RTC is selected with the TC/RTC/CTL selector. ON: The time counter is set to 00:00:00:00 when the first edit point is entered.		
. 5	The beep sounds when any key is pressed or when the tape passes the edit points during preview or automatic editing. ON: The beep sounds.		
4	The SLO-420 videocassette recorder can be connected to this unit or not. ON: The SLO-420 can be connected, but other VTRs cannot be connected. OFF: Another VTR is connected.		
3	Where to output the CUE signal is selected. ON: The CUE signal is output after the IN point. OFF: The CUE signal is output before the IN point.		
2 1 0	These bits determine when the CUE signal is output		



e de la companya de	
Bit	Meaning
7	Signal standard is set. ON: PAL or SECAM system VTR OFF: NTSC or PAL-M system VTR
6 CTL display mode is selected. This bit setting i available only when you set the RECORDER an PLAYER TC/RTC/CTL selectors to CTL or RTC. ON: The time data is displayed between 00:0 and 23:59:59:29. OFF: The time data is displayed between -9:59:59:29 and +9:59:59:29.	
5	The operation after the servo-mechanisms cannot be locked is selected. ON: Even though the unit failed to servo-lock, it begins editing. OFF: The unit does not begin editing until the servo-mechanisms are locked.
The operation after the unit fails in synchronizing recorder with the player is selected. When you set the SYNCHRO selector to ON or ON/CF, this setting is available. ON: The unit will synchronize again with the accuracy of no frame slipping. When it fin cannot, the unit does not begin editing. OFF: Even if the recorder is not synchronized the player, the editing begins.	
3 Synchronization begins depending on the plate recorder's operation. ON: Player (The time base corrector must installed in the player.) OFF: Recorder 2 These bits determine the edit timing during element between -1 and -7 frames. (0: OFF 1: OI 000: The edit timing is automatically determined the edit timing of the between -1 and -7 frames. (0: OFF 1: OI 000: The edit timing is automatically determined by the error whose number is 11 occur another one. Ont: -1 frames 010: -2 frames 011: -100: -4 frames 101: -5 frames 110: -111: -7 frames	

^{*}When bit 7 of the left DIP switches is set to ON, 10 sec is selected as the CUE OUT start position.

4. OPERATIONAL CHECK AND FAULT IDENTIFICATION

1. General

No electrical adjustment is required in this machine. Use of a simple checker and a built-in test program can check all operations.

A test program activating method and checking items are described below.

1-1. Keyboard check

Turn On the POWER switch while pressing the LEARN and ASMBL keys at the same time.

Checking items:

LED ON/OFF

Non-locking switch operation

Locking switch operation

JOG/SHUTTLE operation of Search Dial

RS-232C line operation of KSW-1 board Backup data (LEARN data) verification

ROM and RAM check by CPU on KSW-1 board

1-2. Backup function check in keyboard

Turn ON the POWER switch while pressing the $\overline{\text{LEARN}}$ and $\overline{\text{A1}}$ keys at the same time.

Checking items:

Backup function check by CPU on KSW-1 board The "Error" is displayed when the POWER switch is turned ON at the first time (or when the backup capacitor C305 on the KSW-1 board is discharging). Further error display is not made if the backup function is normal.

The capacitor can afford to provide backup for at least seven days.

1-3. CPU board check

Turn ON the POWER switch while pressing the LEARN and A2 keys at the same time.

The CPU board is automatically checked. (Start by EJECT key on the RECORDER side.)

If a fault is found, the operation is stopped immediately and the error code is displayed.

For this purpose, the service tools are required,

1-4. Software operation check and REF. VIDEO circuit check

Turn ON the POWER switch,

D219 (CHECK3 LED) on the CPU board blinks by the software, In addition, D217 (CHECK1 LED) blinks when a signal is entered into the REF, VIDEO IN terminal.

1-5. Address bus check

Power ON after S201 OFF


Turn OFF the 8-bit DIP switch S201 on the CPU board through it is usually set to ON position. The CPU then executes NOP (00) since the data bus on the CPU board is isolated from devices other than CPU and pulled down by a resistor. At this time, the address line shows simple increments. (However, a refreshed address is assigned to A7 to A15.) Observation of a waveform on the address line with an oscilloscope makes fault identification easier.

Service Tools (necessary for CPU board check)


Ref.	Name	Part (Code	Q'ty	Usage
No.					
J-1	9P short	J-621-0	022-0A	2.	CPU-3 board
	connector				operation check
J-2	PLAYER,	J-621-0	020-0A	1	CPU-3 board
	33P short				operation check
	connector				
J-3	RECORDER,	J-621-0	021-0A	1	CPU-3 board
	33P short				operation check
J-4	8-bit DIP	1-570-	623-11	1	CPU-3 board
	switch				operation check
J-5	VIDEO signal	or syr	ic.	1	CPU-3 board
	signal generate	or			operation check

Note: J-1 to J-4 are contained in the RM-450 service kit (J-621-019-0A).

Connection

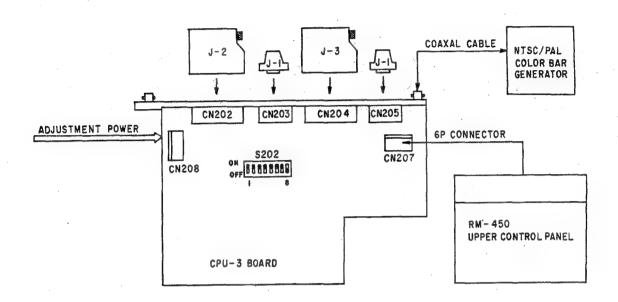


Connector Circuit Diagram for Service Tools

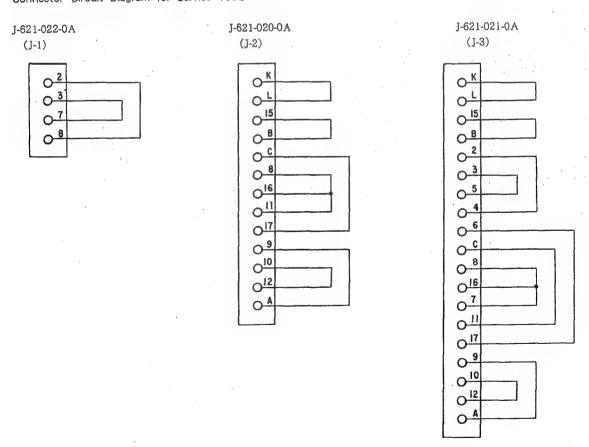

3M-450/RM-450CE

3. Operation Check Procedure (Detailed description for 1-1, 1-2, and 1-3)

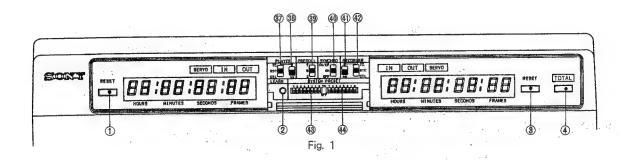

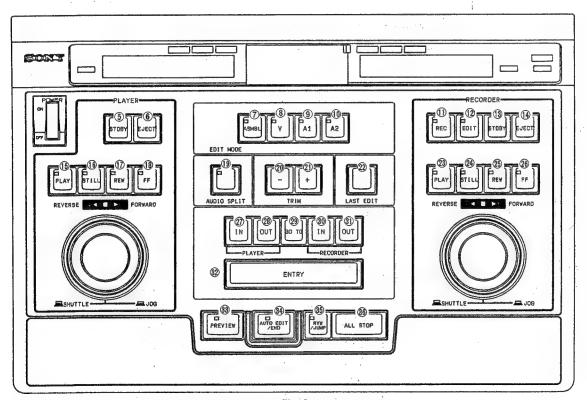


Fig. 2

3-1. Keyboard check

1) Turn power ON while pressing @ LEARN in Fig. 1 and @ [ASMBL] in Fig. 2 at the same time,

2) Press (4) EJECT.

 Again press (4) EJECT, and "11 ···" appears on 7-segment display on the left side.
 Press keys in the order of (1), (2), (3) ··· (8), and (8).

4) Press @ EJECT.

"22..." appears on left 7-seg, display while "P1 on" appears on right 7-seg, display.

(1) Place all indoor switches \$\mathbb{G}\$ to \$\mathbb{G}\$ in Fig. 1 in upper position, and press \$\mathbb{G}\$ [EJECT].

If a fault is found, "Error" is displayed. In this case, press the (3) STDBY key, then the number of error switch is displayed.

If many error exist, the number of next error switch is displayed whenever press the ③ STDBY key.

For switch number, refer to the following.

P	PLAYER		PREROLL	SYNCHRO	RECORDER
T RT CT	1 1	9 33	7 5 3	ON/OF ON OFF	5 6 9 TC RTC CTL
LE	ARN		SYST	EM PRESE	T
			76543210	ON 76543	210
	•			OFF	III.
<u> </u>			7 813	14 15 16	.21 22

- (2) Place the above switches in lower position, and press (**) [EJECT] twice,
- (3) Place ③ ⑤ ⑥ and ⑥ switches in Fig. 1 in center position, and press ⑥ EJECT twice.
- 5) Press (EJECT .

"33 ··· " appears on the left display.

- Set both search dials to SHUTTLE.
 Place both search dials in the center position.
- (2) Check that left search dial display varies as shown to the right when turning left search dial clockwise. Check that display as shown to the right is obtained at fully clockwiswe rotation. The same change must appear also in counter-

The same change must appear also in counterclockwise rotation,

- (3) Check that turning of right search dial provides the same display change as left search dial.
- (4) Set both search dials to JOG.
- (5) When both search dials is turned Slowly:

 Quickly:

All LEDs must come on.

All LEDs must go off.

01, 02 ··· 35, 0H must appear on right 7-segment display.

No error display allowed.

"PlununOH" must appear on right 7-seg. display.

No error display allowed.

"P2 חבים OH" must appear on the right display.

"P3____OH" must appear on the right display.

The right display must indicate "0000 0000". (Left half for left search dial, and right half for right search dial.) $0000 \rightarrow 0001 \rightarrow 0010 \rightarrow 0011 \rightarrow 0100 \rightarrow 0101 \rightarrow 0110 \rightarrow 0111$ 1000

The right display must indicate "00 00". (Left half for left search dial and right half for right search dial.)

The first digit of each display must vary.

The second digit of each display must vary.

M-450/RM-450CE

6) Press (4) EJECT.

"44..." and "232c" appear on the left and right displays respectively.

Again press the (4) EJECT key.

7) Press the 4 EJECT twice, "66..." appears on the left display.

3-2. Backup function check in keyboard

1) Turn OFF the POWER switch,

- 2) Turn ON the POWER switch while pressing ② LEARN and ③ Al at the same time.
- 3) Turn OFF the POWER switch,
- 4) About 5 minutes past, turn ON the POWER switch while pressing ② LEARN and ③ A1 keys at the same time.

"Error" must appear on the right display. (At this time, if pins ③, ④ of CN207 on CPU-3 board are disconnected, then shorted instead, "OH" is displayed,)

"0H" must appear on the right display.

"----" and "XXXXXXXX" must appear on the left and right displays respectively.

3-3. Bottom case check (available only when 7-segment display is active)

3-3-1. Preparation

- (1) Remove the keyboard.
- (2) Insert the 8-bit DIP switch (J-4, 1-570-623-11) into the IC socket labelled S202 (CHECKER) on the CPU board. (Remove this switch after checking.)
- (3) Turn ON 7 bits on the left side and turn OFF 1 bit on the right side.
- (4) Mount the connectors J-1, J-2, and J-3 of the service tools.
- (5) Connect the VIDEO signal to the REF. VIDEO IN terminal,
- (6) Install the keyboard.

3-3-2. Procedure

- (1) Turn ON the POWER switch while pressing

 ② <u>LEARN</u> in Fig. 1 and ① <u>A2</u> in Fig. 2 at the same time.
- (2) Press (4) EJECT in Fig. 2.

(3) Remove the DIP switch from S202.

"450" and "XX-X" must appear on the left and right displays respectively.

01, 02, ... 13 must appear sequentially on the left display, then, "------" and "------" appear on both displays finally, followed by beeps.

3-3-3. Fault identification

If a fault is found, operation is stopped immediately.

Display example for faulty place:

Left display: 07

Right display:

01

Ţ

↓ STEP

Error No. Error code

in STEP

01

1

To confirm whether additional error codes are present in the same step, press (3) STDBY key in Fig. 2. Unchanged error No. in the step indicates there is no additional error in the step.

To proceed to the next step, press (4) EJECT key in Fig.2. For the meaning of error code, see the Error Code List.

RM-450 Self Check Program Error Code List

Step	Code	Meaning
01	01	ROM Check Sum Error
02	01	RAM Read/Write Error
03	00 01 02	CTC1 ch1 Initialize NG CTC1 ch1 Count Down NG CTC1 ch1 Timer INT Error
04	00 01 02	CTC2 ch3 Initialize NG CTC2 ch3 Count Down NG CTC2 ch3 Timer INT Error
05	20 21	CTC2 ch0 Initialize NG CTC2 ch1 Initialize NG
06	31 33	CTC3 ch1 Initialize NG CTC3 ch3 Initialize NG
07	00 01 02 03	EXT SYNC Check CTC1 ch0 Initialize NG REF. VIDEO IN NG F2/F1 (Framing) Pulse Width too Wide F2/F1 (Framing) Pulse Width too Narrow
08	01 02 03 04 05 06 07	SIO, R-9P/P-9P REMOTE Check chA (Recorder) Tx NG chA (Recorder) Rx NG (R-TxD→R-RxD Line NG) chA (Recorder) Data NG (R-TxD→R-RxD Data not equal) chB (Player) Tx NG chB (Player) Rx NG (P-TxD→P-RxD Line NG) chB (Player) Data NG (P-TxD→P-RxD Data not equal) INT Error
		ROM: IC219 CTC1: IC225 SIO: IC212 RAM: IC215 CTC2: IC224 CTC3: IC221
09	90 98 99	R (Recorder) 33P S/C, R-33P REMOTE Check RESET1 (PW Detect) NG SYSTEM_CLOCK or STROBE NG SERIAL IN/OUT NG
09	09 19 29 39 59 69 79	EDIT SAFETY or EDIT LAMP stuck at "L" REC KEY or REC LAMP stuck at "L" EDIT KEY or PAUSE LAMP stuck at "L" CUT OUT or TAPE STOP or STOP KEY stuck at "L" FWD LAMP or FWD KEY or PAUSE KEY stuck at "L" FF LAMP or FF KEY or FWD/REV stuck at "L" REW LAMP or REW KEY or FUNC ON stuck at "L"
09	01 02 03 04 05 06 07 08	EDIT SAFETY OF EDIT LAMP Short w/ SERIAL IN/OUT EDIT SAFETY OF EDIT LAMP STUCK AT "H" EDIT SAFETY OF EDIT LAMP SHORT W/ REC LAMP OF REC KEY EDIT SAFETY OF EDIT LAMP SHORT W/ PAUSE LAMP OF EDIT KEY EDIT SAFETY OF EDIT LAMP SHORT W/ FF KEY & LAMP OF FWD/REV EDIT SAFETY OF EDIT LAMP SHORT W/ FWD KEY & LAMP OF PAUSE KEY EDIT SAFETY OF EDIT LAMP SHORT W/ REW KEY & LAMP OF FUNC ON EDIT SAFETY OF EDIT LAMP SHORT W/ TAPE STOP OF CUT OUT OF STOP KEY
09	11 12 13 14 15 16 17	REC KEY or REC LAMP short w/ SERIAL IN/OUT REC KEY or REC LAMP stuck at "H" REC KEY or REC LAMP short w/ PAUSE LAMP or EDIT KEY REC KEY or REC LAMP short w/ FF KEY & LAMP or FWD/REV REC KEY or REC LAMP short w/ FWD KEY & LAMP or PAUSE KEY REC KEY or REC LAMP short w/ REW KEY & LAMP or FUNC ON REC KEY or REC LAMP short w/ TAPE STOP or CUT OUT or STOP KEY

Step	Code	Meaning
09	21 22 23 24 25 26	EDIT KEY OF PAUSE LAMP short w/ SERIAL IN/OUT EDIT KEY OF PAUSE LAMP stuck at "H" EDIT KEY OF PAUSE LAMP short w/ FF KEY & LAMP OF FWD/REV EDIT KEY OF PAUSE LAMP short w/ FWDFWD KEY & LAMP OF FWD/REV EDIT KEY OF PAUSE LAMP short w/ REW KEY & LAMP OF PAUSE KEY EDIT KEY OF PAUSE LAMP short w/ TAPE STOP OF CUT OUT OF STOP KEY
		R 33P S/C: IC204
09	31 32 33 34 35	CUT OUT or TAPE STOP or STOP KEY short w/ SERIAL IN/OUT CUT OUT or TAPE STOP stuck at "H" CUT OUT or TAPE STOP or STOP KEY short w/ FF KEY & LAMP or FWD/REV CUT OUT or TAPE STOP or STOP KEY short w/ FWD KEY & LAMP or PAUSE KEY CUT OUT or TAPE STOP or STOP KEY short w/ REW KEY & LAMP or FUNC ON
09	42	STOP KEY or TAPE STOP stuck at "H"
09	51 52 53 54	PAUSE KEY or FWD KEY & LAMP short w/ SERIAL IN/OUT PAUSE KEY or FWD LAMP stuck at "H" PAUSE KEY or FWD KEY & LAMP short w/ FF KEY & LAMP or FWD/REV PAUSE KEY or FWD KEY & LAMP short w/ REW KEY & LAMP or FUNC ON
09	61 62 63	FWD/REV or FF KEY & LAMP short w/ SERIAL IN/OUT FWD/REV or FF LAMP stuck at "H" FWD/REV or FF KEY & LAMP short w/ SERIAL IN/OUT
09	71 72 73	REW KEY & LAMP or FUNC ON short w/ SERIAL IN/OUT REW KEY or REW LAMP stuck at "H" REW KEY short w/ REW LAMP or REW LAMP's CR (470p/1M) NG
09	82 83	FF KEY or FF LAMP stuck at "H" FF KEY short w/ FF LAMP or FF LAMP's CR (470p/1M) NG
09	92 93	FWD KEY or FWD LAMP stuck at "H" FWD KEY short w/ FWD LAMP or FWD LAMP's CR (470p/1M) NG
09	10	FUNC ON or REW LAMP stuck at "H"
09	20 30	CTC2 ch0 TRG INT Error or STOP KEY NG CTC3 ch1 TRG INT Error or SEARCH SPEED NG or CTL IN/OUT NG
10	90 98 99	P (Player) 33P S/C, P-33P REMOTE Check RESET1 (PW Detect) NG SYSTEM CLOCK or STROBE NG SERIAL I/O NG
10	49 79 59 69 09	TAPE STOP or STOP KEY or REW KEY stuck at "L" REW LAMP or STOP KEY or REW KEY stuck at "L" FWD LAMP or FWD KEY or PAUSE KEY stuck at "L" FF LAMP or FF KEY or FWD/REV stuck at "L" FUNC ON or PAUSE LAMP stuck at "L"
10	41 42 43 44	STOP KEY or TAPE STOP or REW KEY & LAMP short w/ SERIAL IN/OUT STOP KEY or TAPE STOP stuck at "H" STOP KEY or REW LAMP stuck at "H" STOP KEY or TAPE STOP or REW KEY & LAMP short w/ FWD KEY & LAMP or PAUSE KEY
	45 46	STOP KEY or TAPE STOP or REW KEY & LAMP short w/ FF KEY & LAMP or PAUSE KEY STOP KEY or TAPE STOP or REW KEY & LAMP short w/ PAUSE LAMP or FUNC ON
10	51 52 53 54	PAUSE KEY OF FWD KEY & LAMP short w/ SERIAL IN/OUT PAUSE KEY OF FWD LAMP stuck at "H" PAUSE KEY OF FWD KEY & LAMP short w/ FF KEY & LAMP OF FWD/REV PAUSE KEY OF FWD KEY & LAMP short w/ PAUSE LAMP OF FUNC ON
10	61 62 63	FWD/REV or FF KEY & LAMP short w/ SERIAL IN/OUT. FWD/REV or FF LAMP stuck at "H" FWD/REV or FF KEY & LAMP short w/ PAUSE LAMP or FUNC ON

Step	Code	. Meaning	
10	72 73	REW KEY or REW LAMP stuck at "H" REW KEY short w/ REW LAMP or REW LAMP's CR (470p/1M) NG	
10	10 82 FF KEY or FF LAMP stuck at "H" 83 FF KEY short w/ FF LAMP or FF LAMP's CR (470p/1M) NG		
10	92 93	FWD KEY or FWD LAMP stuck at "H". FWD KEY short w/ FWD LAMP or FF LAMP's CR (470p/1M) NG	
10	. 11	FUNC ON or PAUSE LAMP short w/ SERIAL IN/OUT FUNC ON or PAUSE LAMP stuck at "H"	
10	CTC2 ch1 TRG INT Error CTC3 ch3 TRG INT Error or SEARCH SPEED NG or CTL IN/OUT NG		
		R 33P S/C:IC203	
11	00 01 02 03	Daisy Chain (Display according to Priority) SIO INT PRIORITY NG CTC1 INT PRIORITY NG CTC2 INT PRIORITY NG CTC3 INT PRIORITY NG *SIO>CTC1>CTC2>CTC3	
12	01 02	CUE OUT (Using P 33P S/C for This Check) CUE OUT and SLOW LAMP stuck at "H" CUE OUT and SLOW LAMP stuck at "L"	
13	_	ERROR/KEY BEEP (Check BEEP ON or Not)	

1. 概略仕様

REVIEW, AUTO EDIT/END (イン 自動コントロール

サート, アセンブル), RVW/JUMP,

LEARN

プレーヤとレコーダ:FF, STILL, 手動コントロール

REW, PLAY, サーチダイヤル(正・逆

方向 1/30倍速~10倍速) レコーダのみ:REC, EDIT

フレーム修正

IN点, OUT点, プレーヤ, レコーダ共

タイムカウンタ

タイムコード: 00:00:00:00~

23:59:59:29

CTL/RTC: +9:59:59:29~

-9:59:59:29また は00:00:00:00~ 23:59:59:29(切換

可能)

編集精度

タイムコード基準:

調相時 ±0フレーム

CTL基準:調相時 ±1フレーム

AC入力コネクタ (3ピン) コネクタ

9ピンコネクタ (プレーヤ, レコーダ)

CUE OUTコネクタ (BNC型)

アクティブ LOW

LOW レベル : 0~0.5V HIGH レベル : 3.5~5V

REF. VIDEO INコネクタ (BNC型)

75Ω 不平衡

コンポジットビデオ信号:

0.5~2Vp-p

コンポジットシンク信号:

0.5~5Vp-p

電源

消費電力

動作温度

最大外形寸法

重量

別売りアクセサリ

AC100V±10%, 50/60Hz±10%

11W

0°C~40°C

 $390 \times 93 \times 265$ mm (w/h/d)

3.1kg

リモコンケーブル (33 ピン/33 ピン)

RCC-5F (5m)

RCC-15FT (15m 延長用)

リモコンケーブル (9ピン/9ピン)

RCC-5G (5m) RCC-10G (10m) RCC-30G (30m)

ラックマウントメタル RMM-450 ダブルサイズテーブル SU-450

2. 概要

33ピンおよび9ピンのリモートコネクター

2種類のコネクターを装備し、各種VTRと幅広く組み合わせることができます。

対象VTR

ベータ	SLO-383、420
ベータカム	BVW-10、40、75シリーズ
1177.117	BVU-800、900シリーズ、
Uマチック	VO-5800、5850
1インチ	BVH-2000、3000シリーズ

(BVW-10は再生専用機です。SLO-420とVO-5800 には録画機能がありますが、編集の際はプレーヤーとしてお使いください。)

使用するコネクターの種類は、プレーヤー、レコーダー別々に選択できます。これにより、9ピンコネクターのVTRと33ピンコネクターのVTRを組み合わせての編集も可能です。

CTL、タイムコード、RTCの選択が可能

9ピンコネクターのVTRを接続すると、タイムカウンター表示としてCTLカウント、タイムコードのほかにRTC (Relative Time Code)を選択することができます。

RTCは、タイムコードの増加、減少分をCTLカウント時と同様に表示する、新しいタイプのタイムカウンター表示です。 タイムコード使用時の高精度な編集を、より簡単に行うことができるようになりました。

充実した編集機能

アセンブル編集ではビデオとオーディオ(2チャンネル)を同時に編集し、インサート編集ではそれぞれを単独で、または組み合わせて編集します。インサート編集のときは、ビデオとオーディオのIN点をずらした編集(スプリット編集)が可能です。

編集前のプレビューおよび編集後のレビューにより、編集は さらに確実なものとなります。

サーチダイヤルによるクイックアクセス

ジョグとシャトル、2つのモードを持つサーチダイヤルで、 素早く、しかも正確に編集点を探すことができます。

調相機能

走行速度を調整して2台のVTRを調相することができますから、編集誤差がほとんどありません。

DT編集が可能

9ピンコネクターのVTR(プレーヤー側)にDTヘッドが搭載されていると、画面を可変速モードや静止画モードで編集できます。

ピンチオンディレーの学習機能

接続したVTRのピンチオンディレーを自動測定し、メモリーする機能を持っています。データは、電源を切っても約1週間保持されます。

操作パネル上で動作条件のセットが可能

プリロール時間や編集タイミングなど、編集に関わる様々な 基本的動作条件を、操作パネル上でセットできます。

エラー表示機能


誤った操作をすると、警告音を出すとともにエラー番号をタイムカウンターに表示します。エラーの内容は、付属のエラーメッセージカードを参照して確認できます。

ラックマウントが可能

別売りのラックマウントメタルRMM-450を使って19インチ標準ラックに、また、ダブルサイズテーブルSU-450を使ってシステムコンソール (SU-511+SU-513) に組み込むことができます。

3. 各部の名称と働き

コネクターパネル

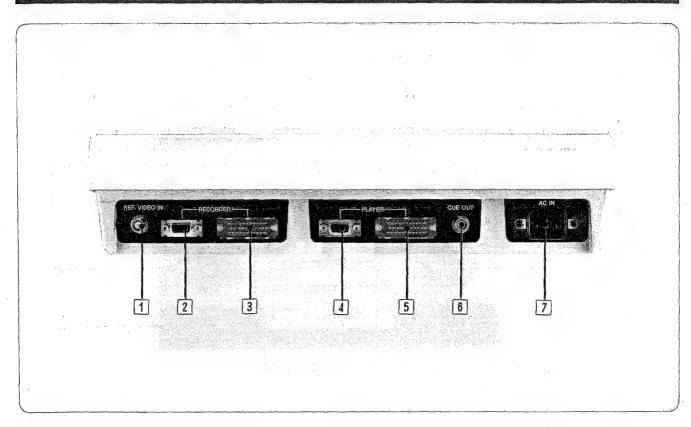

1 REF. VIDEO INコネクター(BNC型)

基準同期信号を入力します。

2 RECORDER 9ピンコネクター

別売りのリモートコントロールケーブルを使って、レコーダー の9ピンリモートコネクターと接続します。

③RECORDER 33ピンコネクター

別売りのリモートコントロールケーブルを使って、レコーダー の33ピンリモートコネクターと接続します。

4 PLAYER 9ピンコネクター

5 PLAYER 33ピンコネクター


⑥ CUE OUTコネクター(BNC型)

IN点のタイミングを出力します。タリー信号として使います。

☑ AC INコネクター

付属の電源コードを使って、ACコンセントと接続します。

操作パネル

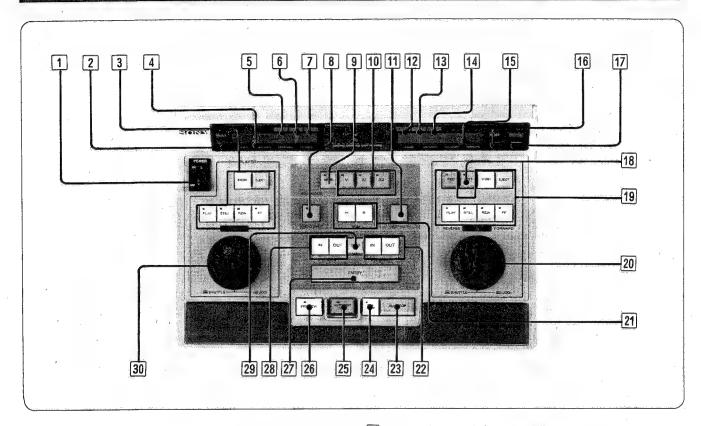

1 POWERスイッチ

② RESETボタン(プレーヤー側)

タイムカウンター表示をリセットするときに押します。 (CTLまたはRTCを表示中のみ)

INボタンやOUTボタンを押しながらRESETボタンを押すと、入力したIN点、OUT点がリセットされます。

3プレーヤー操作ボタン

プレーヤー側VTRの操作ボタンと同じ働きをします。

STDBY(スタンバイ)ボタン(OFFのみ)

EJECT(イジェクト)ボタン

PLAY(再生)ボタン

STILL(静止)ボタン

REW(巻き戻し)ボタン

FF(早送り)ボタン

33ピンコネクターのVTRには、EJECTボタンは働きません。

4 タイムカウンター(プレーヤー側)

テープ上のCTL信号またはタイムコードを読み取って、テープ の走行時間を時・分・秒・フレームの単位で表示します。誤っ た操作をしたときはエラー番号を表示します。

5 SERVOインジケーター(プレーヤー側)

自動編集中やプレビュー中、プレーヤーのサーボロックがはず れると点灯します。

⑥INインジケーター(プレーヤー側)

プレーヤー側のIN点を入力すると点灯します。

了OUTインジケーター(プレーヤー側)

プレーヤー側のOUT点を入力すると点灯します。

8 AUDIO SPLIT(オーディオ スプリット)ボタン

スプリット編集をするとき、押して点灯させてからオーディオのIN点を入力します。

ASMBL(アセンブル)ボタン

アセンブル編集をするとき押します。

10 インサートボタン

インサート編集をするとき、インサートするチャンネルを選びます。

V(ビデオ)

A1(オーディオ1)

A2(オーディオ²)

们LAST EDIT (ラストエディット)ボタン

押すと、前の区間の編集点をタイムカウンター上に呼び出すことができます。

12 INインジケーター(レコーダー側)

13 OUTインジケーター(レコーダー側)

14 SERVOインジケーター(レコーダー側)

自動編集中やプレビュー、レビュー中、レコーダーのサーボロックがはずれると点灯します。

15 タイムカウンター(レコーダー側)

16 RESETボタン(レコーダー側)

17 TOTALボタンとランプ

ボタンを押すたびに、ランプは点滅または消灯になります。 ランプ点滅中にレコーダー側RESETボタンを押すと、タイムカウンターはリセットされます(トータルリセット)。以後、ランプ点滅中は、トータルリセット後のレコーダーの走行時間がタイムカウンターに表示されます。

[18] EDIT (エディット)ボタン

手動編集をするとき、このボタンを押しながらPLAY ボタンを押します。このボタンだけを押すと、プレーヤーからの画像がレコーダー側モニターに映ります。(アセンブル編集時、またはビデオのインサート編集時)

19レコーダー操作ボタン

REC(録画)ボタン

STDBY(スタンバイ)ボタン(OFFのみ)

EJECT(イジェクト)ボタン

PLAY(再生)ボタン

STILL(静止)ボタン

REW(巻き戻し)ボタン

FF (早送り)ボタン

33ピンコネクターのVTRには、EJECTボタンは働きません。

[20]サーチダイヤルと方向表示ランプ(レコーダー側)

編集点を探すのに使います。

ダイヤルが上がっている状態ではシャトルモード、押し込んだ 状態ではジョグモードになります。ダイヤルを押すごとに2つ のモードが交互に切り換わります。

21 TRIM(トリム)ボタン(+、一)

INボタンやOUTボタンを押しながらこのボタンを押すと、入力したIN点、OUT点を1フレーム単位で修正できます。

22INボタンとOUTボタン(レコーダー側)

レコーダー側のIN点、OUT点を入力するとき、このボタンを押 しながらENTRYボタンを押します。

23 ALL STOP(オールストップ)ボタン

押すと、プレーヤー、レコーダーともに、テープはストップします。

24RVW/JUMP(レビュー/ジャンプ)ボタン

編集した区間を見直すときに押します。レコーダーだけが編集 時と同様に走行します(レビュー)。

レビュー中に押すと、OUT点付近が素早く確認できます(ジャンプ)。

25 AUTO EDIT/END(オートエディット/エンド)ボタン

自動編集を開始させるときに押します。編集中に押すと、そこをOUT点にして編集は終了します。

26PREVIEW(プレビュー)ボタン

編集のリハーサルをするときに押します。



27 ENTRY(エントリー)ボタン

IN点、OUT点を設定するとき、INまたはOUTのボタンを押しながらこのボタンを押します。


28INボタンとOUTボタン(プレーヤー側)

29 GO TOボタン

IN点、OUT点の画像を確認するとき、このボタンを押しながら INボタンまたはOUTボタンを押します。

30サーチダイヤルと方向表示ランプ(プレーヤー側)

扉の中

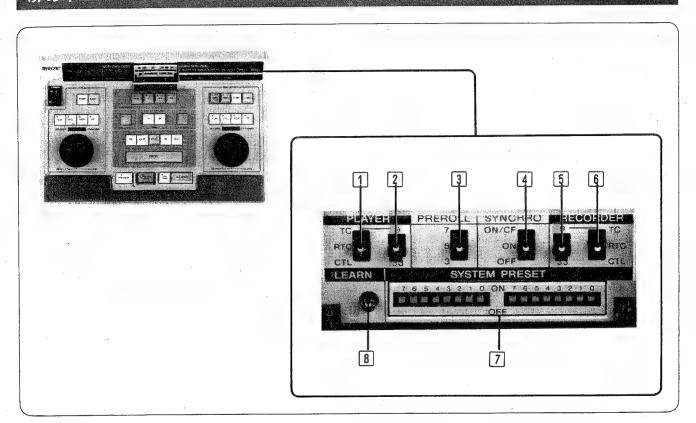

①TC/RTC/CTLセレクター(プレーヤー側)

タイムカウンターの表示内容を切り換えます。

TC:読み出したタイムコードを表示。RESETボタンを押しても リセットできません。

RTC:読み出したタイムコードの増加、減少分を表示。RESET ボタンでリセットできます。

CTL:CTL パルスをカウントして表示。RESETボタンでリセットできます。

29/33(9ピン/33ピン)セレクター(プレーヤー側)

9ピンコネクターに接続したプレーヤーをコントロールするか、 33ピンコネクターに接続したプレーヤーをコントロールするか を選びます。

③ PREROLL(プリロール時間)セレクター

プリロール時間を、7(または10)秒、5秒、3秒のうちから選択します。

このセレクターを7にした場合、プリロール時間はSYSTEM PRESETスイッチ (左側7のスイッチ) の設定で7秒または10秒 になります。

4 SYNCHRO (調相)セレクター

ON/CF:調相を行い、カラーフレームをとります。カラーフレームをとるため、編集精度が若干悪くなることがあります。ただし、33ピンコネクターのVTRを使用する場合はONと同じです。

ON:調相を行いますが、カラーフレームはとりません。

OFF:調相は行いません。

SLO-383、420を使用する場合のご注意

SYNCHROセレクターをONまたはON/CFにすると、自動編集時、エラー表示が出ることがあります。

5 9/33セレクター(レコーダー側)

⑥ TC/RTC/CTLセレクター(レコーダー側)

7 SYSTEM PRESETスイッチ

左側	左側				
7	7 6 5 4 3 2 1 0 ON OFF				
事号	方容				
7	PREROLLセレクターが7のときのブリロール時間				
	ON:10秒				
	OFF(工場出荷時):7秒				
6	カウンターの自動リセット(TC/RTC/CTLセレクターがRTC				
	またはCTLのとき)				
	ON:編集点を入力するとカウンターを自動的にリセットする。				
1	OFF(工場出荷時):自動リセットを行わない。				
5	確認蓄				
	ON:キーを押したとき、および、プレビューか自動編集中にテ				
	ープが編集点を通過したときに確認音を出す。				
	OFF (工場出荷時):確認音は出さない。				
4	SLO-420の使用				
	ON:ビデオカセットレコーダーSLO-420を接続するとき。				
	OFF (工場出荷時): それ以外のVTRを接続するとき				
3	IN点とCUE OUT信号の関係				
	ON:IN点のあとでCUE OUT信号を出力する。				
	OFF(工場出荷時):IN点の前でCUE OUT信号を出力する				
2、1、0	IN点の何秒後(あるいは前)にCUE OUT信号を出力するか、				
	の設定(ON=1、OFF=0として2進数で表示)				
	000 (工場出荷時): 0秒 001:1秒				
	010:2秒 011:3秒				
	100:4秒 101:5秒				
	110:6秒 111:7秒(左側7のスイッチがON				
	のときは10秒)				

右側			
ON OF	ON 7 6 5 4 3 2 1 0 OFF		
番号	内 容		
7	VTRの信号方式 ON:PAL、SECAM方式(25フレーム/秒)のVTRを使用するとき。 OFF (工場出荷時):NTSC、PAL-M方式(30フレーム/秒)の VTRを使用するとき。		
6	TC/RTC/CTLセレクターでCTLかRTCを選んでいるときの表示範囲 ON:00:00:00:00から23:59:59:29 (PAL、SECAMでは24) OFF (工場出荷時):-9:59:59:29 (24)から+9:59:59:29 (24)		
5	サーボロックがかからないときの動作 ON:サーボロックがかからなくても編集は開始する。 OFF (工場出荷時):サーボロックがかからないと編集は開始 しない。		
4	SYNCHROセレクターがONまたはON/CFの場合、調相ができなかったときの動作ON:±0フレームの精度になるように調相できないときは編集を開始しない。OFF(工場出荷時):調相ができなくても編集は開始する。		
3	調相するのに、プレーヤーとレコーダー、どちらの速度を制御するか。 ON: ブレーヤー(タイムベースコレクターの内蔵または接続が必要) OFF (工場出荷時): レコーダー		
2、1、0	編集タイミング(ON=1、OFF=0として2進数で表示) 000(工場出荷時):自動的に検出(通常はこの設定にしておきます。「Error-11」の表示が出たら設定を変えてください。) 001:-1フレーム 010:-3フレーム 100:-4フレーム 110:-6フレーム 111:-7フレーム		

8 LEARN(学習)ボタン

押すと、接続したVTRを走行させて、ピンチオンディレーを自動測定します。

4. 動作チェック及び不良箇所の発見

1. 概要

本機には、電気的な調整部分はありません。動作チェックは 簡易なチェッカーを使用することにより、内蔵のテストソフトを使い全てのチェックを行うことができます。 テストソフトの起動方法とチェックできる内容

1-1. キーボード部チェック

LEARN と ASMBL を同時に押しながらパワーONする。 チェックできる内容

LEDの点灯, 消灯 ノンロックスイッチの動作 固定スイッチの動作 サーチダイヤルの JOG/SHUTTLE 動作 KSW-1 基板 RS232C ラインの動作 バックアップデータ(LEARN DATA)の確認 KSW-1 基板 CPUの ROM, RAMチェック

1-2. キーボード部バックアップ機能チェック LEARN と All を同時に押しながらパワーONする。 チェックできる内容

KSW-1 基板 CPUのバックアップ機能の確認はじめて電源を入れた時(又はKSW-1 基板のバックアップ用コンデンサC305がディスチャージしているとき)はエラー表示をします。バックアップ機能が正常であれば、その後はエラー表示しません。コンデンサによるバックアップ時間は、MIN.7 日間とする。

1-3. CPU 基板チェック

[LEARN] と A2 を同時に押しながらパワー ON する。 CPU 基板のチェックを自動進行で行います。(レコーダ側 EJECT 釦でスタート。)

不良箇所があった場合はそこで止まり、不良の内容をコードで表示します。このテストモードを実行するときは、サービス治具が必要となります。

1-4. ソフト動作チェック, REF. VIDEO 用回路チェック 通常のパワー ON をする。

CPU基板上のD219 (CHECK3 LED) がソフトウェアにより 点滅します。又 REF. VIDEO INが入力されると, D217 (CHECKI LED) が点灯します。

1-5. アドレスバスのチェック

S201をOFFとした後にパワーON


CPU基板上の8bit DIPスイッチS201は通常ONとなっていますがこれを全てOFF位置にします。CPUのデータバスは、CPU以外から切り離され抵抗でプルダウンされるためCPUはNOP(00)を実行します。このときアドレスラインは単純増加します。(但し $A7\sim A15$ はリフレッシュアドレスが入る。)アドレスラインの波形をオシロスコープで観察することにより不良箇所が発見しやすくなります。

2. サービス治具 (CPU 基板のチェック時に必要となります)

	'A 2 A 9 /			
Ref. No.	名 称	部品コード	使用数	用 途
J-1	9Pショート コネクタ	J-621-022-0A		CPU-3基板動作
J-2	PLAYER, 33P ショートコネクタ	J-621-020-0A	1	チェック用
J-3	RECORDER, 33P ショート コネクタ	J-621-021-0A	1	"
		1-570-623-11 (ALPS)	1	<i>"</i>
J-5	VIDEO 信号又は同 発生器		1	"


J-1~J-4はRM-450サービスキットJ-621-019-Aの中に全て含まれています。

接続図

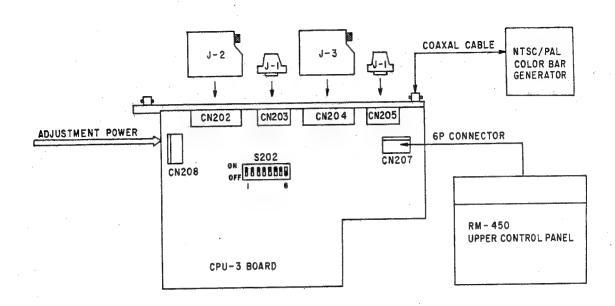


サービス治具用コネクタ回路図






J-621-020-0A (J-2)

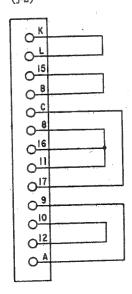

J-621-021-0A (J-3)

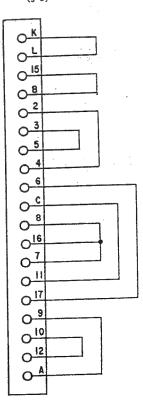

3. 動作チェックの方法 (1-1, 1-2, 1-3の内容)


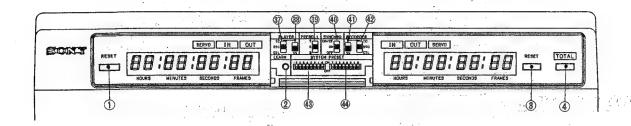


図-1

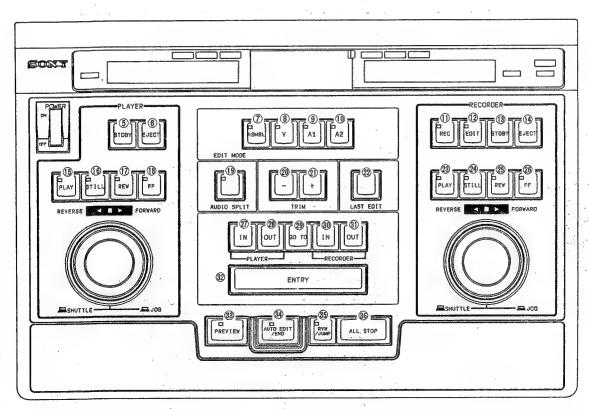

3-1. キーボード部チェック

1) 図-1の②の[LEARN] 釦と図-2の⑦の[ASMBL] 釦を同時に押しながらパワースイッチをONする。

2) 個のEJECT 釦を押す。

3) 更に仰のEJECT 釦を押すと左側7SEG表示に11 … が出る。①,②,③…⑤,⑤の順に釦を押す。

4) Mの EJECT 釦を押す。

左側 7SEG 表示に 22 … が出て

右側7SEG表示にPl onが出る。

Error 表示がでた場合®の「STDBY」釦を押すことにより そのスイッチのNo.を表示する。

Error が複数ある場合®の「STDBY」釦を押すごとに次のスイッチのNo.を表示する。スイッチNo.は下記参照。

74 97 0110.EXXX3 08 71 77 1101101					
PLAYER	PREROLL	SYNCHRO	RECORDER		
TC RTC CTL	9 7 m 5 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	ON/OF	5 6 TC RTC CTL		
LEARN	SYS	SYSTEM PRESET			
•	76543210 ON 76543210 OFF				
	7 813	14 15 16.	21 22		

- (2) 上記スイッチを全部下側にし個の EJECT 釦を2回押す。
- (3) 図 −1 のスイッチ⑦③@@の4ヵ所をセンター位置にし、 @の EJECT 釦を2 回押す。
- 5) Mの EJECT 釦を押す。

左側7SEG表示に33…が出る。

- (1) 左右のサーチダイヤルをSHUTTLEにする。 左右の両方をセンター位置にする。
- (2) 左側のサーチダイヤルを右回しした時、左側サーチダイヤル の表示が右のように変化すること。 右一杯で右のように表示すること。 左回しした時も同様に表示が変化すること。
- (3) 右側のサーチダイヤルについても(2)と同様の動作によって、右側サーチダイヤルの表示が(2)と同様に変化すること。
- (4) . 左右のサーチダイヤルを JOG とする。
- (5) 左右のサーチダイヤルを, ゆっくり回した時。 速く回した時。
- 6) (4の EJECT 釦を押す。

左側7SEG表示に44…が,右側7SEGに232c表示が出る。 この状態でもう一度⑭の[EJECT] 釦を押す。

7) **④**の **EJECT** 釦を2回押す。 左側7SEG表示に66 ··· が出る。 LEDが全点灯すること。

LEDが全部消えること。

右側7SEG 表示に01,02,…35,0Hの順に表示する こと。 Error 表示しないこと。

右側 7SEG 表示に P1 山山山山 OH と表示すること。 Error 表示しないこと。

右側7SEG表示にP2 ____ OH と表示すること。 右側7SEG表示にP3 ___ OH と表示すること。

右側7SEG表示に0000 (左側サーチダイヤル) 0000 (右側サーチダイヤル) 表示すること。 0000→0001→0010→0011 → 0100→0101→0111 1000

右側7SEG表示に00(左側サーチダイヤル)00(右側 サーチダイヤル)と表示すること。

各々の表示の1桁目の表示が変化すること。 各々の表示の2桁目の表示が変化すること。

右側7SEG表示にErrorと表示すること。 (このとき CPU-3基板 CN207 の No. ③, ④ピンのリードを外しショートしておくと OH表示が出る。)

右側7SEG表示に0Hと表示すること。

3-2. キーボード部バックアップ機能チェック 手順

- 1) パワースイッチをOFFする。
- 2) ②の LEARN 釦と⑨の Al 釦の2ヶを同時に押しながらパワースイッチをONする。
- 3) パワースイッチをOFFする。
- 4) 約5分過ぎてから②の LEARN 釦と⑨の AI 釦の2ヶを同時に 押しながらパワースイッチをOFF する。

左右の7SEG表示に-----(左側) XXXXXXXX (右側) と表示すること。

3-3. ボトムケース部チェック(このチェックは 7SEG に表示が出る場合のみ使えます)

3-3-1. 準備

- (1) キーボード部を外す。
- (2) CPU 基板 S202 (CHECKER) の表示のあるICソケットに8P DIPスイッチ (J-4, 1-570-623-11) を 挿入する。(このスイッチはチェック後, 取り外すこと。)
- (3) BIT スイッチの左側7bitをONとし、右側1bitをOFFとする。
- (4) 治具用コネクタ J-1, J-2, J-3を取り付ける。
- (5) REF. VIDEO INにVIDEO信号を接続する。
- (6) キーボード部を取り付ける。

3-3-2. 手順

- (1) 図-1の②の LEARN 釦と図-2の⑩の A2 釦の2ヶを 同時に押しながらパワースイッチをONする。
- (2) 図-2の⑭のEJECT 釦を押す。
- (3) S202 に取り付けた bit スイッチを取り外す。

7SEG表示に, 左側450, 右側 "XX-X" とバージョンが表示される。 左側の7SEG表示が01, 02, …, 13と変化し, 最後に

左側の7SEG表示が01,02,…,13と変化し、取後に-----(左側) -----(右側) と表示しピッピーと音が鳴ること。

3-3-3. 不良箇所の発見

不良がある場合はその場所で止まります。

不良があった場合の表示例:

左側: 07 右側: 01 01 01 ↓ ↓ ↓ ↓ STEP STEP内の 不良CODE 不良通しNo. の内容


RM-450 自己診断プログラムエラーコード表

Step	Code	内容		
01	01	ROM のデータに異常がある。		
02	01	RAMの書き込みデータと読み出しデータが一致しない。		
03	00 01 02	CTC1 ch1 初期化不可(タイマモード)。 CTC1 ch1 カウンタ動作不良。 CTC1 ch1 タイマ割込不良。		
04	00 01 02	CTC2 ch3 初期化不可(タイマモード)。 CTC2 ch3 カウンタ動作不良。 CTC2 ch3 タイマ割込不良。		
05	20 21	CTC2 ch0 初期化不可 (カウンタモード)。 CTC2 ch1 初期化不可 (カウンタモード)。		
06	31 33	CTC3 ch1 初期化不可 (カウンタモード)。 CTC3 ch3 初期化不可 (カウンタモード)。		
07 -	00 01 02 03	外部SYNCチェック CTC1 chO 初期化不可 (カウンタモード)。 REF. VIDEO IN 不良。 F2/F1 (Framing) パルス幅が極端に広い。 F2/F1 (Framing) パルス幅が極端に狭い。		
08	01 02 03 04 05 06	SIO, R-9P/P-9P REMOTE チェック chA (レコーダ側) 送信不可。 chA (レコーダ側) 送信不可。 chA (レコーダ側) 受信不良 (R-TxD→R-RxDライン不良)。 chA (レコーダ側) データ不良 (R-TxD→R-RxDデーター致せず)。 chB (プレーヤ側) 送信不可。 chB (プレーヤ側) 受信不良 (P-TxD→P-RxDライン不良)。 chB (プレーヤ側) データ不良 (P-TxD→P-RxDデーター致せず)。 割込不良。		
		ROM: IC219 CTC1: IC225 S10: IC212 RAM: IC215 CTC2: IC224 CTC3: IC221		
09	90 98 99	R (Recorder) 33P S/C, R-33P REMOTEチェック RESET1 不良。 SYSTEM CLOCK又はSTROBE不良。 SERIAL IN/OUT不良。		
09	09	(信号名は英文参照) "L" レベルに固定。		
	79			
09	01 02 03 \$	EDIT SAFETY又はEDIT LAMPがSERIAL IN/OUTとショート。 EDIT SAFETY又はEDIT LAMPが "H" レベルに固定。 EDIT SAFETY又はEDIT LAMPが 他信号ラインとショート。 (信号名は英文参照。)		
	82 83 92 93 10 20 30	英文参照。 REW KEYとREW LAMPがショートしている。 又は、REW LAMPのCR (470pF/1MΩ) が不良 (含ミスマウント、半田ブリッジ等)。 英文参照。 CTC2 ch0 トリガ割込不良又はSTOP KEY (割込トリガとして使用) 不良。 CTC3 ch1 トリガ割込不良又はSEARCH SPEED不良。又はCTL IN/OUT不良。		

Step	Code	内 容	
10		P (Player) 33P S/C, P-33P REMOTEチェック 英文参照。	
······································		P 33P S/C: IC203	
11	00 01 02 03	デイジィ・チェーンチェック (割込優先順位 * に従ってエラー表示を行う) SIOの割込順位不良。 CTC1の割込順位不良。 CTC2の割込順位不良。 CTC3の割込順位不良。 CTC3の割込順位不良。 *SIO>CTC1>CTC2>CTC3	
12	01 02	CUE OUT (このチェックにP 33P S/Cを使用) CUE OUTとSLOW LAMPが "H" レベルに固定。 CUE OUTとSLOW LAMPが "L" レベルに固定。	
13	- ERROR/KEY BEEP (BEEP音が出るか否かでチェックする)。		


5. REMOVE THE RM-450 FROM RACK MOUNT はずし方(ラックより)

From the RMM-450

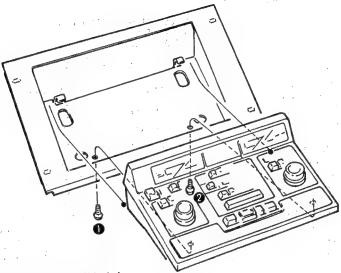

ネジ❶❷を外して、RM-450をラックより引き出す。

Take out the \blacksquare , \blacksquare screws and pull the RM-450 from the rack mount.

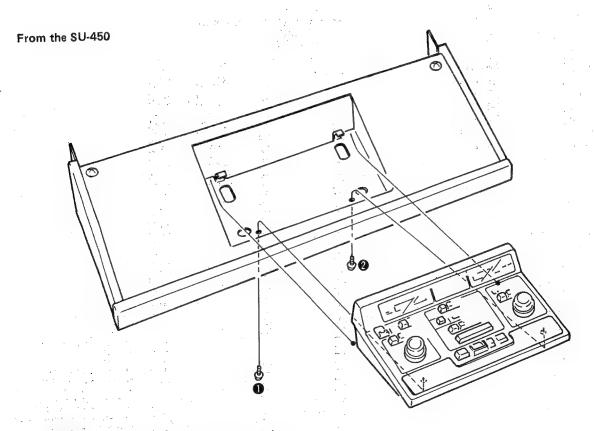

ネン 12を外して、RM-450をラックより引き出す。

Take out the $m{0}$, $m{2}$ screws and pull the RM-450 from the rack mount.

CF77267N2 (TI)

6. SEMICONDUCTORS

6-1. SEMICONDUCTORS PIN ASSIGNMENTS

VTR CONTROL - TOP VIEW -64 FWD KEY Vcc 1 SEREAL IN 2 63 CTL PULSE OUT SEREAL OUT 3 62 SEARCH SPEED OUT 61 GND GND 4 60 RESET I STROBE 5 SYSTEM CLOCK 6 59 STOP KEY 58 CTL PULSE IN NC 7 57 PAUSE KEY MVC.R 8 SEARCH SPEED IN 9 56 N.C 55 GND MCK 10 RESET 2 11

Vcc 12

DO[13

D1 14

02 15

D3 [6

D4 17 D5 18

D6 19

D7 20

NC 21

GND 22

AO 23

AI 24

10RD 25

FUNCTION ON 26

55 GND
54 EDIT LAMP
53 TAPE STOP OUT
52 TAPE STOP IN
51 FWO/REV
50 GND
49 REC LAMP


48 Vcc 47 EDIT SAFTY 46 PAUSE LAMP 45 REW KEY 44 REW LAMP 43 GND

42 REC KEY
41 N.C
40 FF LAMP
39 FF KEY


| 10WR 27 | 38 FWD LAMP | 37 GND 28 | 37 GND | 28 | 36 SLOW KEY | 29 | 35 SLOW LAMP | 25 SLOW LA

CE | 30 | 35 | SLOW LAW
PLAY KEY | 31 | 34 | EDIT KEY
RECODER /FLAYER IN | 32 | 33 | Vcc

CXK5464ASP-10L (SONY) - TOP VIEW -

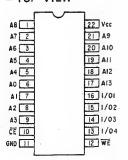



MB88201H-539N (FUJITSU) 4 BIT CPU - TOP VIEW--

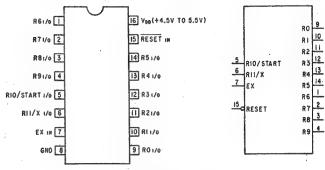

EX - : EXTERNAL XTAL
RO - RII : I/O PORTIR) IN/OUT
RESET IN
START : STANDBY RELESE IN
RII/X : EXT CLOCK IN/INT CLOCK OUT

M50747ESP M50747-108SP (MITSUBISHI) 1 TIME CPU - TOP VIEW -

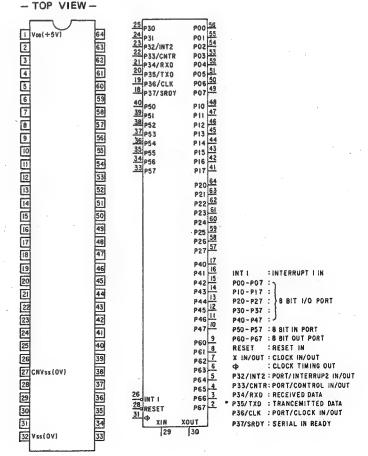


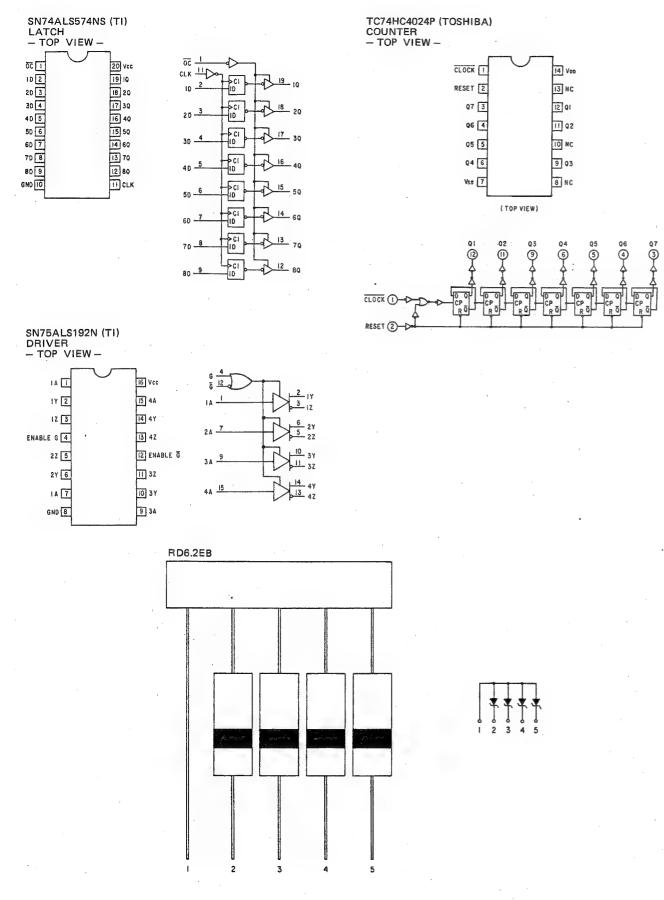

6-2. SEMICONDUCTOR LEAD LAYOUTS AM26LS32PC (ADVANCED MICRO DIVICES) MB88201H-539N (FUJITSU) SN75ALS192N (TI) TC74HC138P (TOSHIBA) TC74HC174P (TOSHIBA) TC74HC4040P (TOSHIBA) TC74HC4538P (TOSHIBA)



CF77267N2 (TI) M50747:108SP (MITSUBISHI)



CXK5864ASP-10L (SONY) MBM27C256-LLU1011 (FUJITSU) MSM82C51ARS (OKI) TMPZ84C30AP-6 (TOSHIBA)



LH0080A (SHARP) LH0084A (SHARP)



M54529AP (MITSUBISHI) SN74LS38N (TI) TC40H004P (TOSHIBA) TC74HC32P (TOSHIBA) TC74HC74P (TOSHIBA) TC74HC4024P (TOSHIBA) μPC339C (NEC)



M54562P (MITSUBISHI)



NJM2903D (JRC)




NJM2930L-05 (JRC) PST520C-2 (MITSUMI)



S1-3052V (SANKEN)



SN74ALS574NS (TI)



DTC144ES 2SA1115P




2SC2785-F



DAN202K




GP1L52 GP1L53




HZS10NB1 RD6.2ES-L3 RD15ES-B1 1SS119




LB402VA




LT9002E



LT9010D LT9010E



S2VB10



GL-3PR5





GL-8EG22 GL-9HD4





7. DIAGRAMS


7-1. BLOCK DIAGRAM

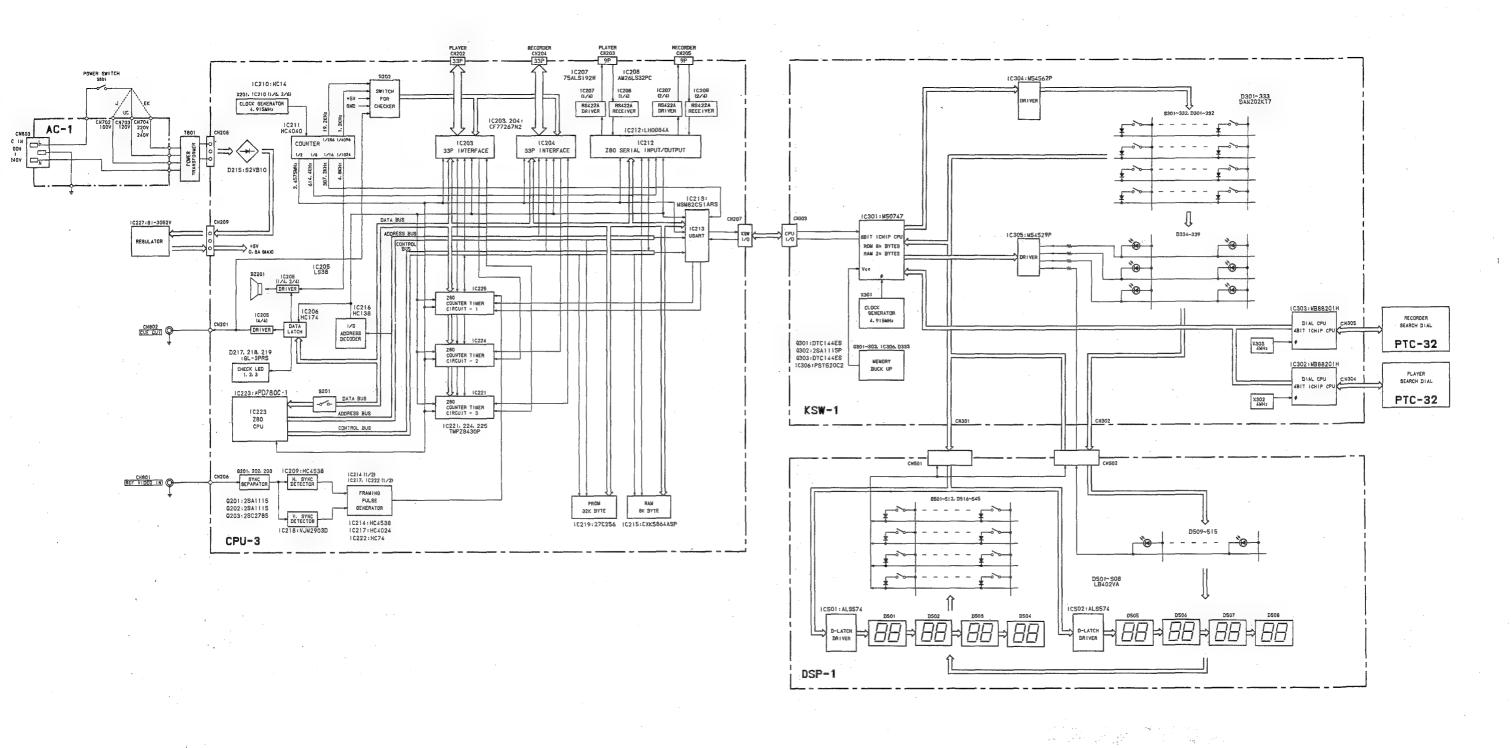


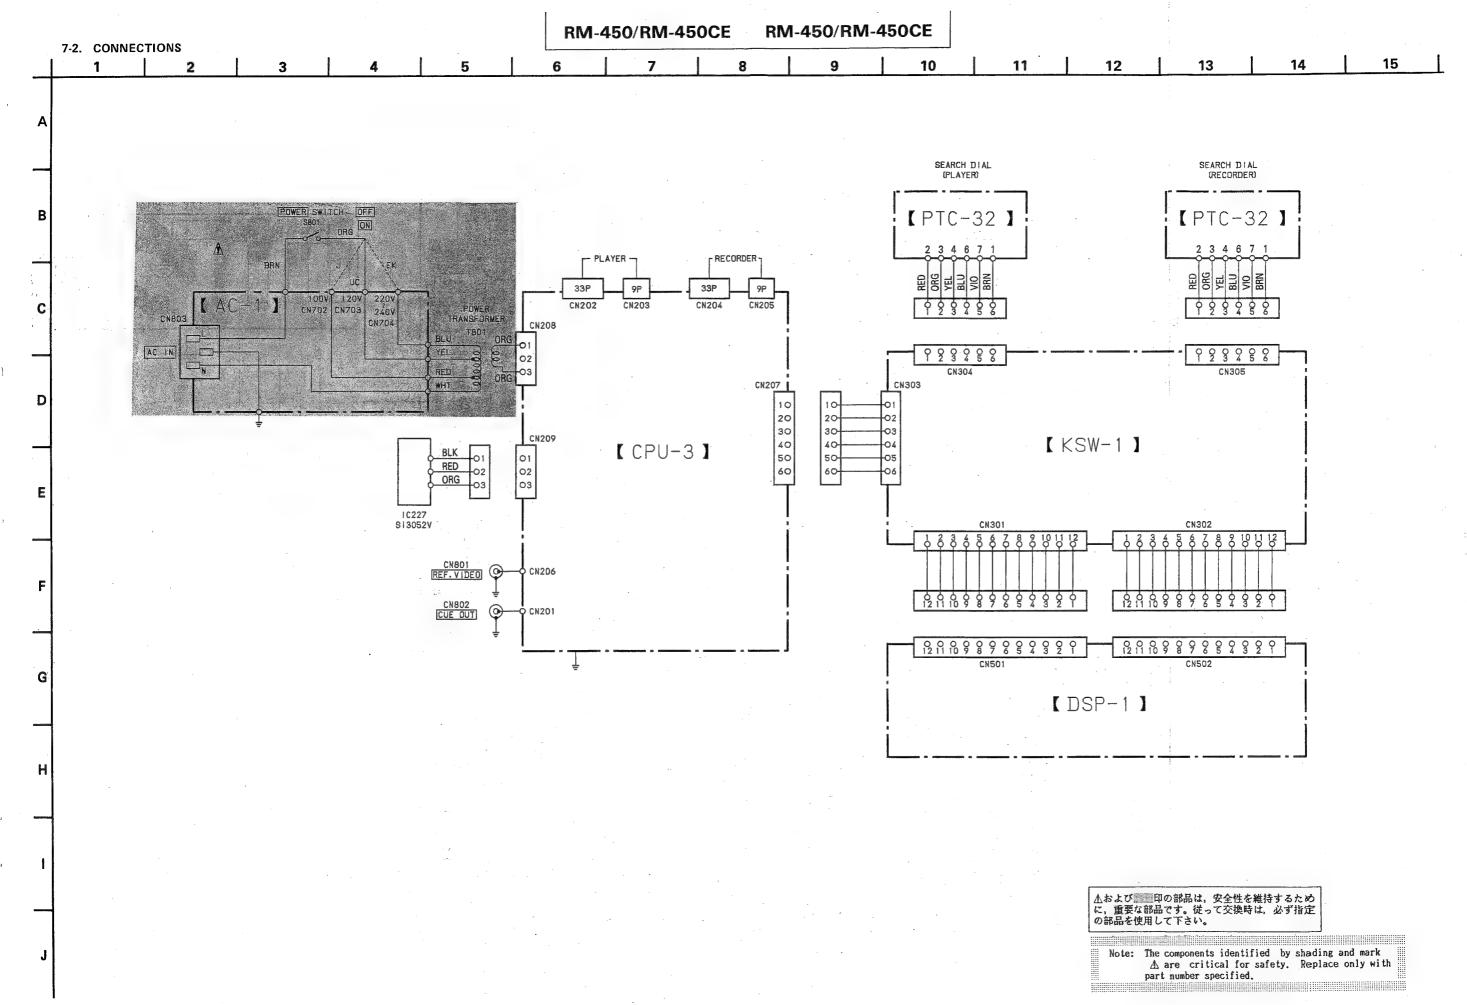

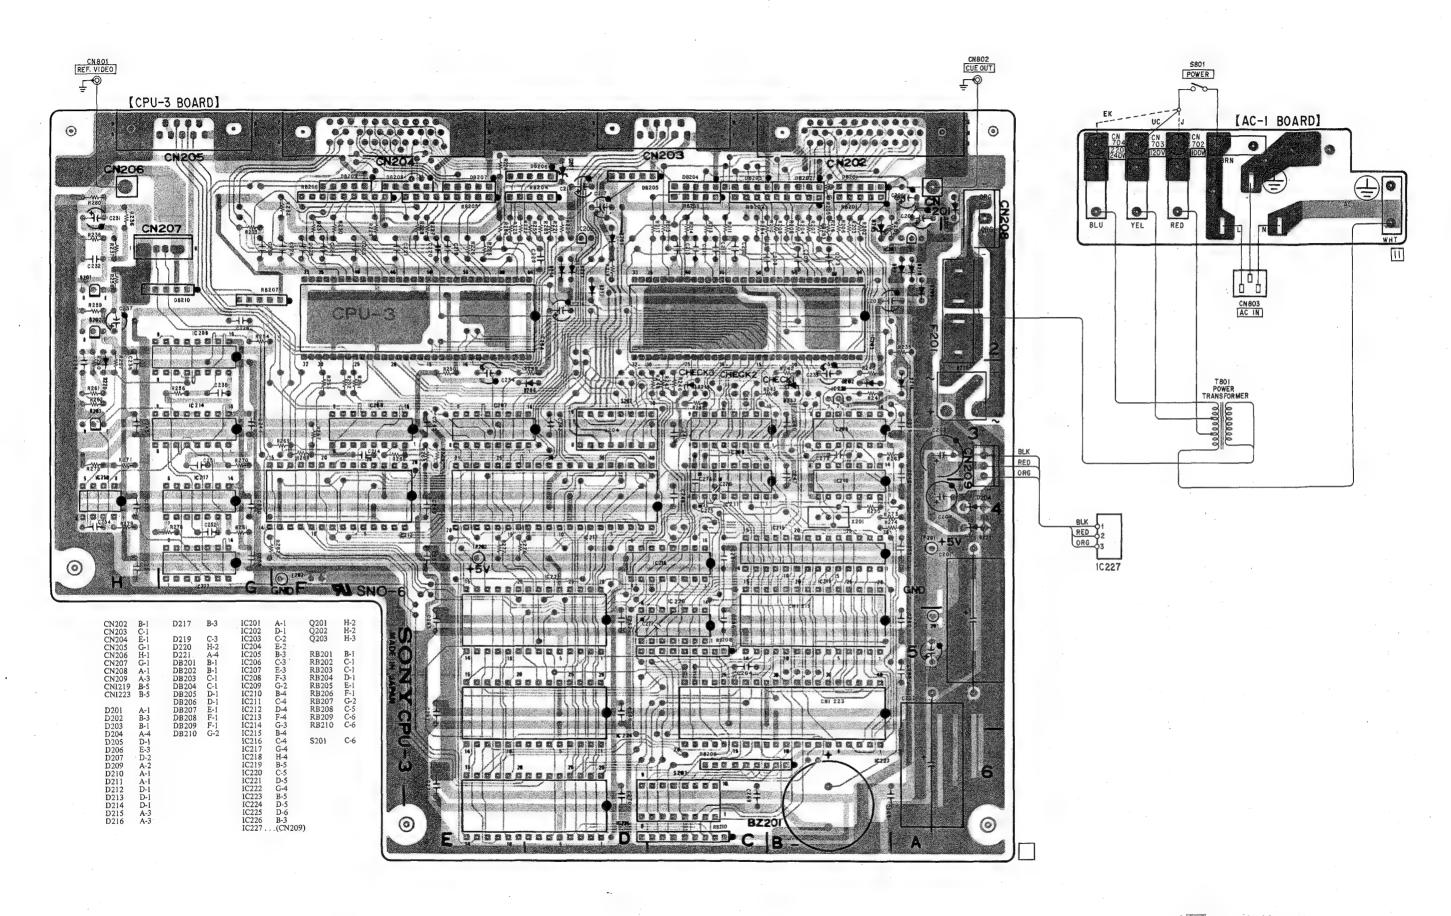


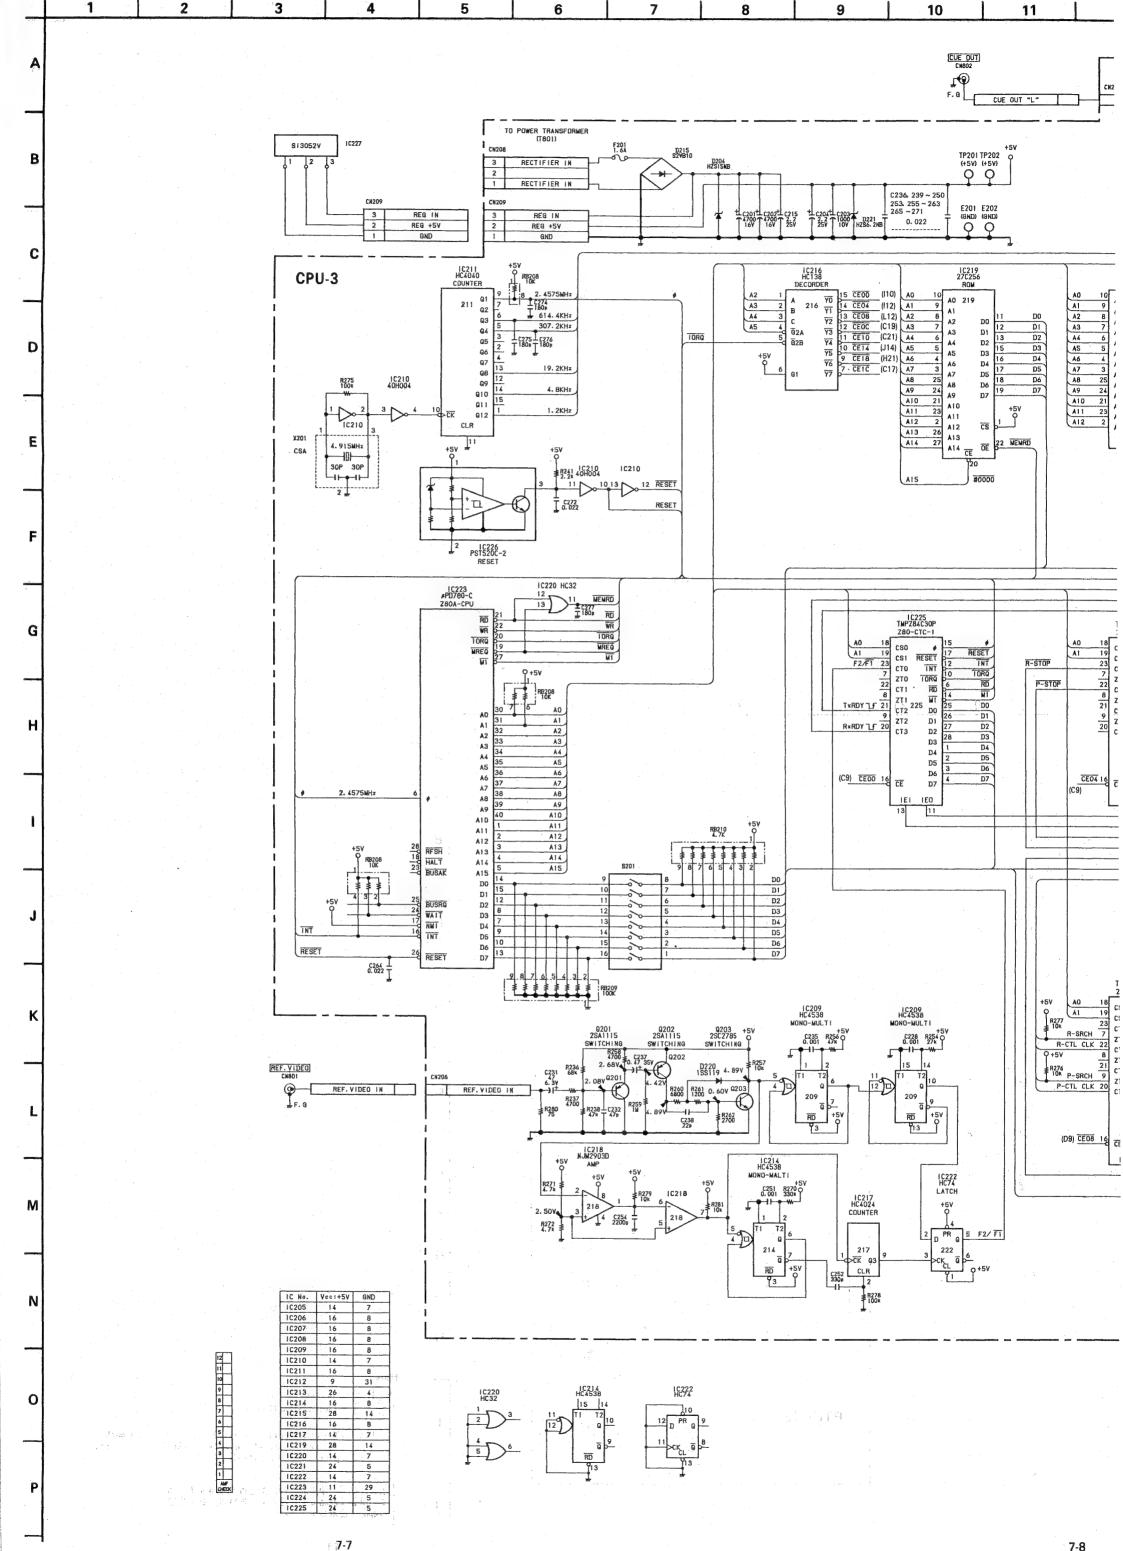


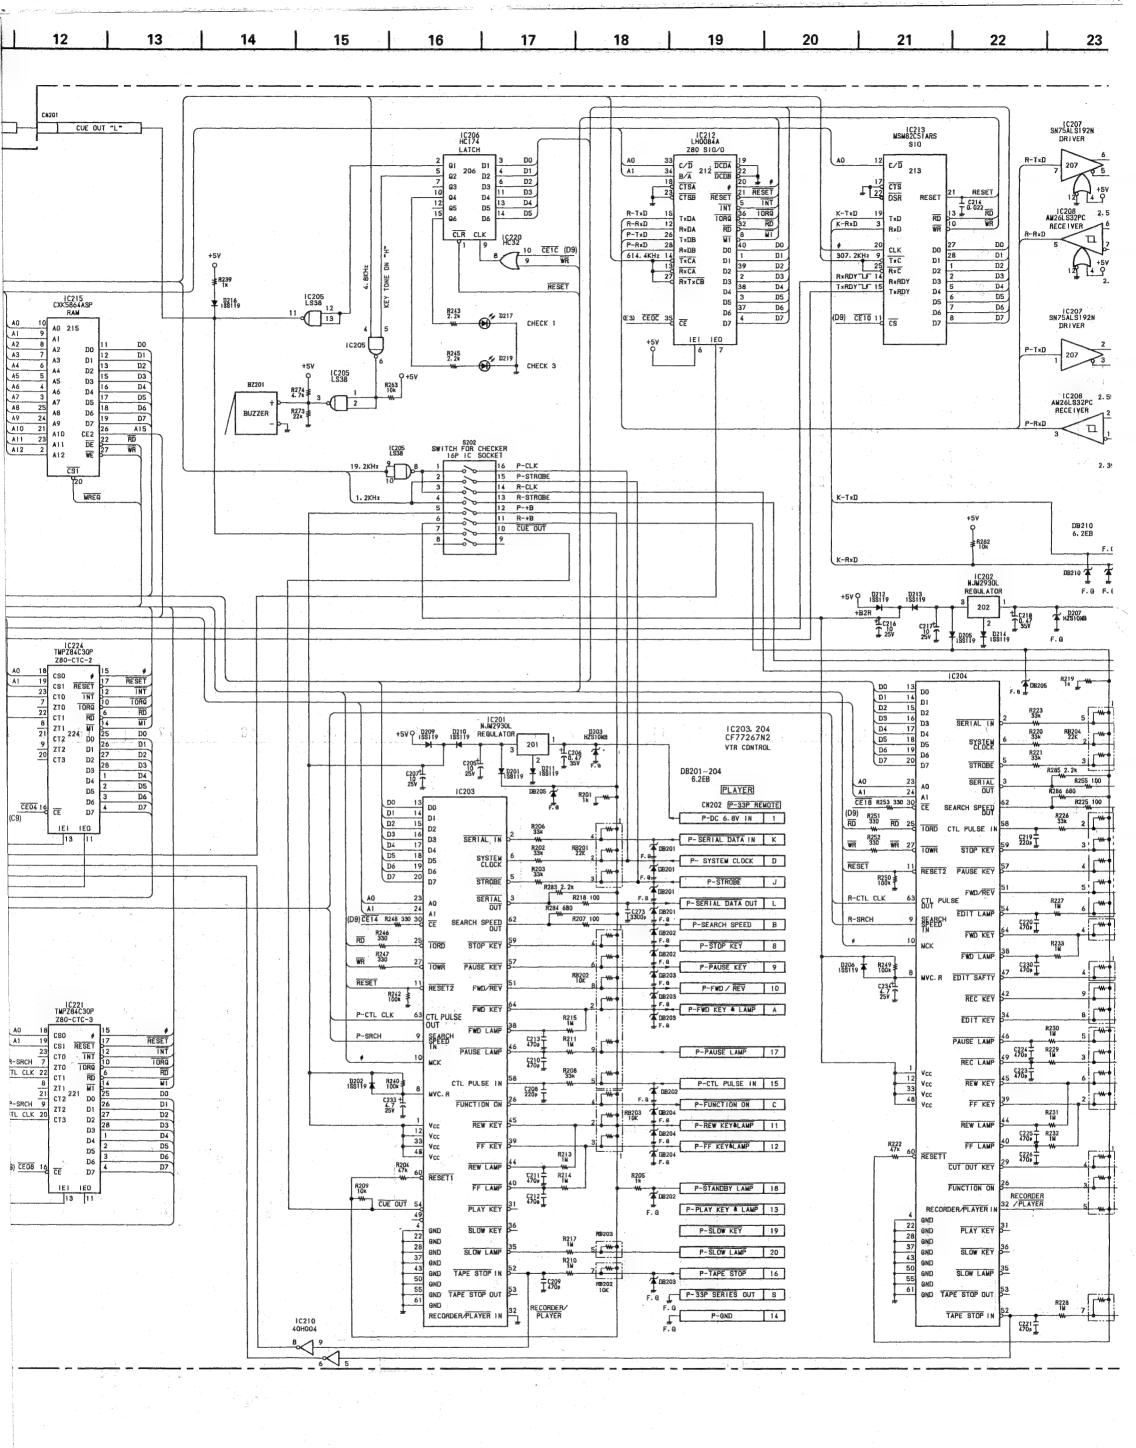


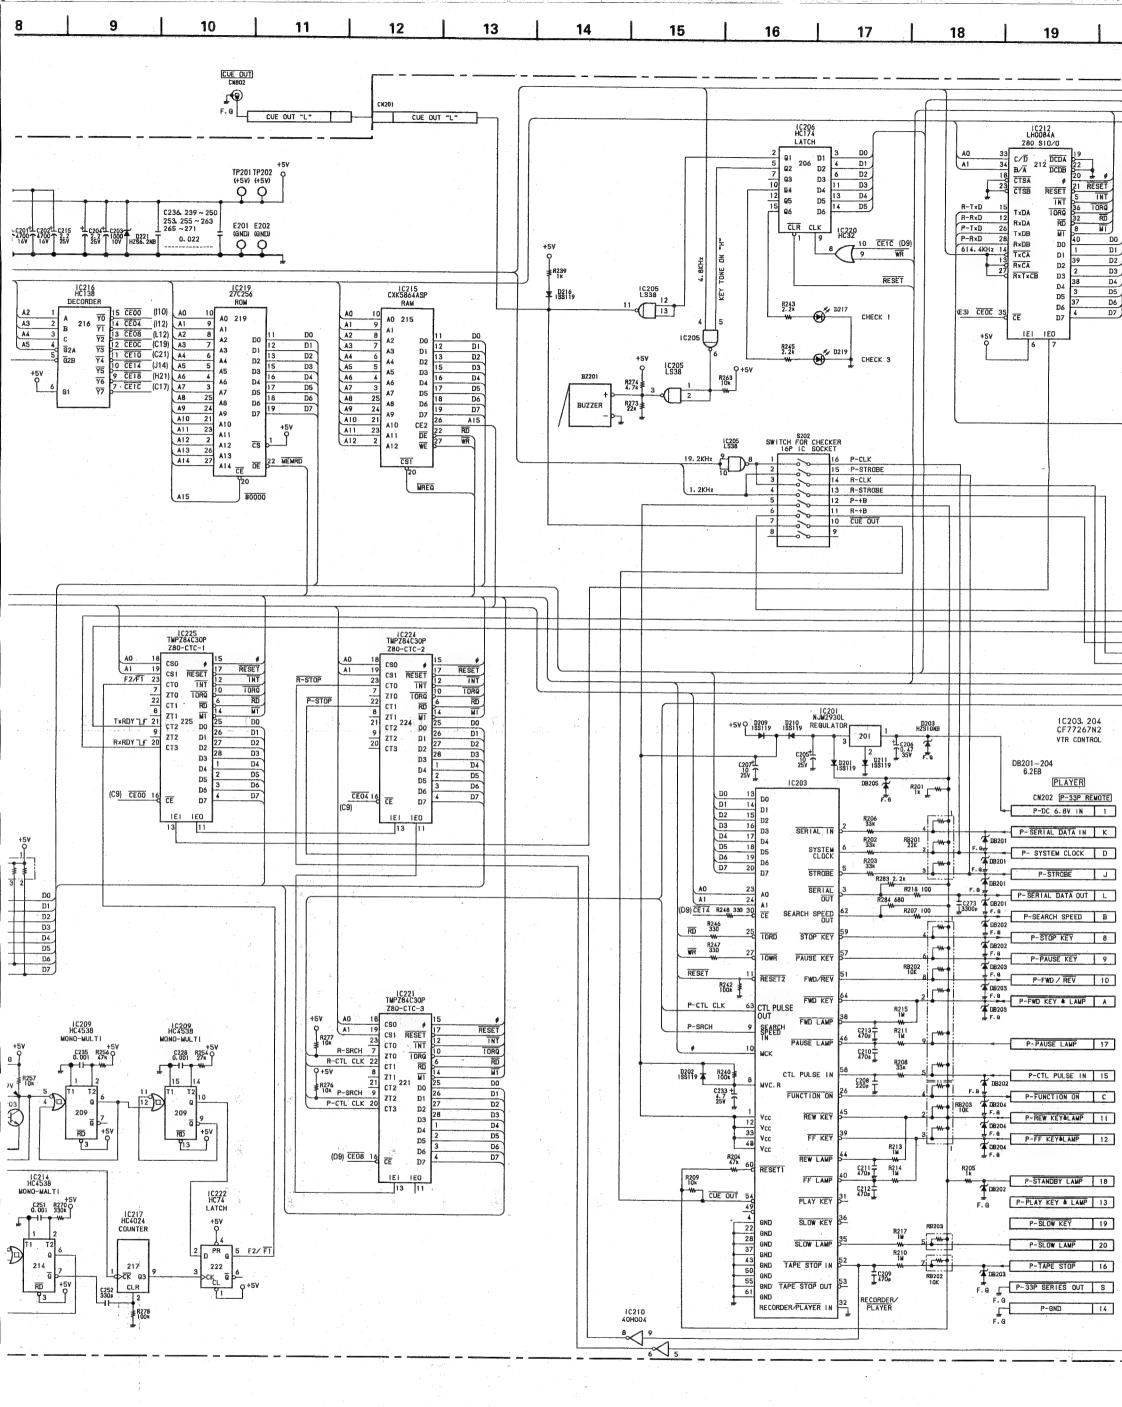



7-8

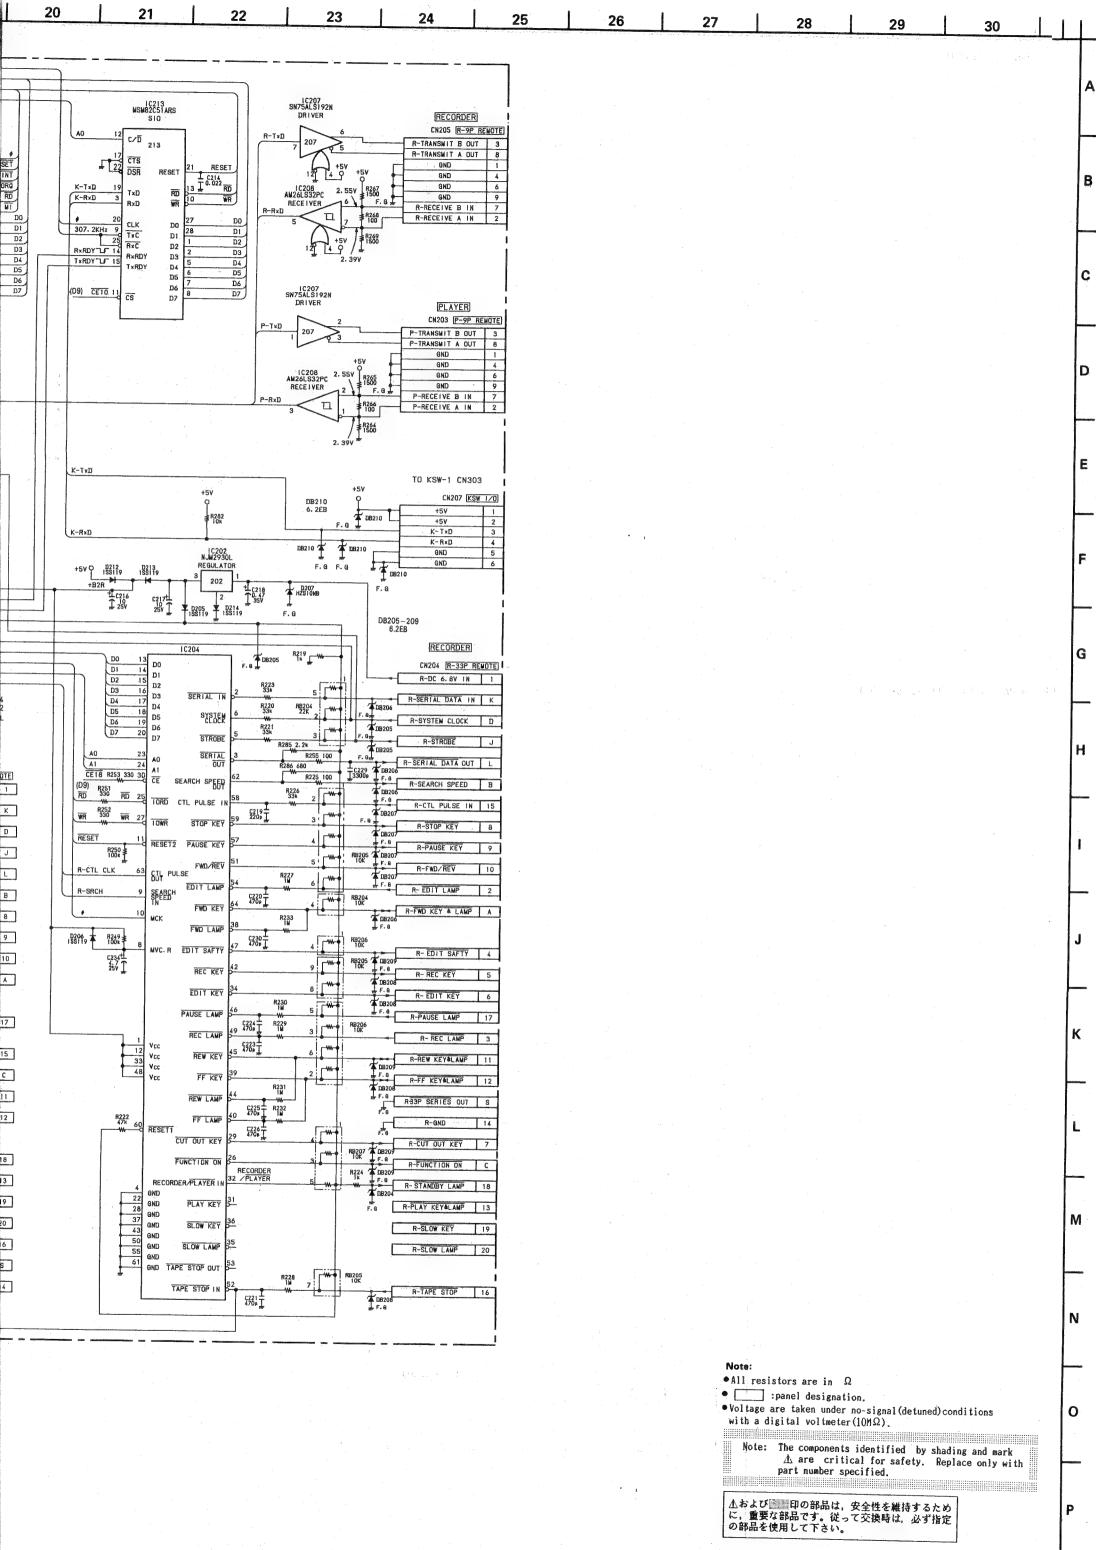


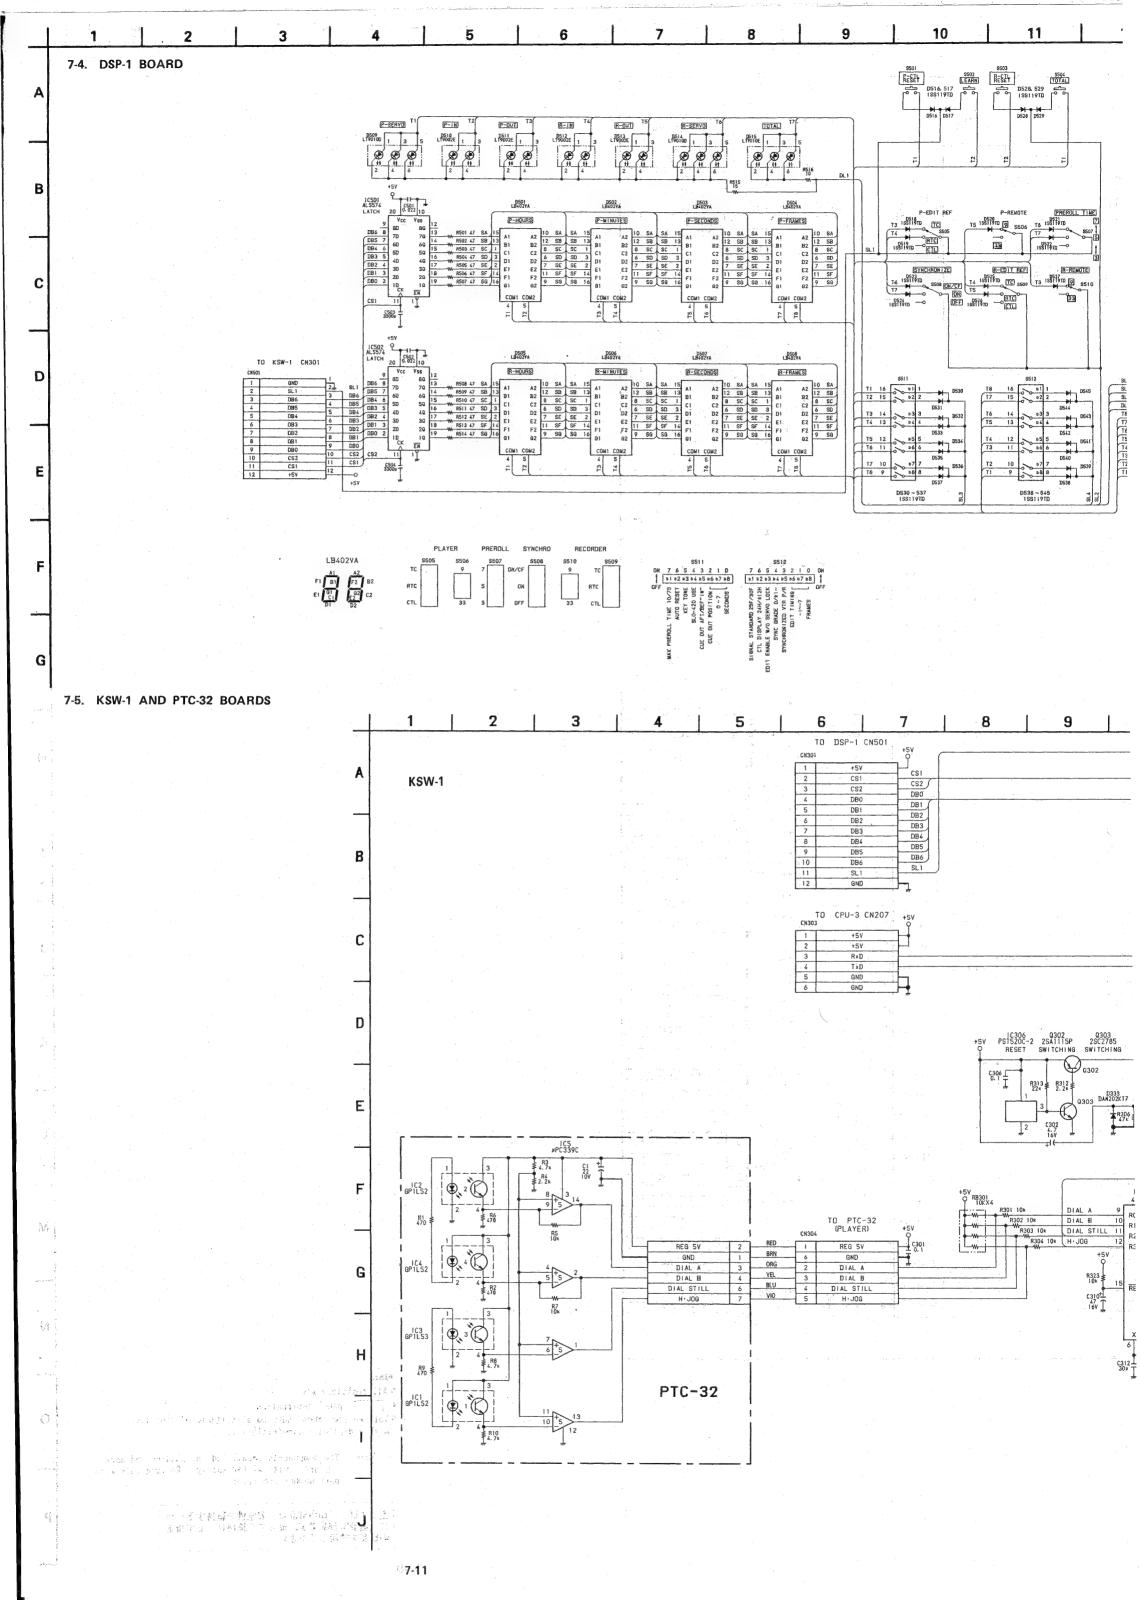




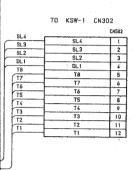


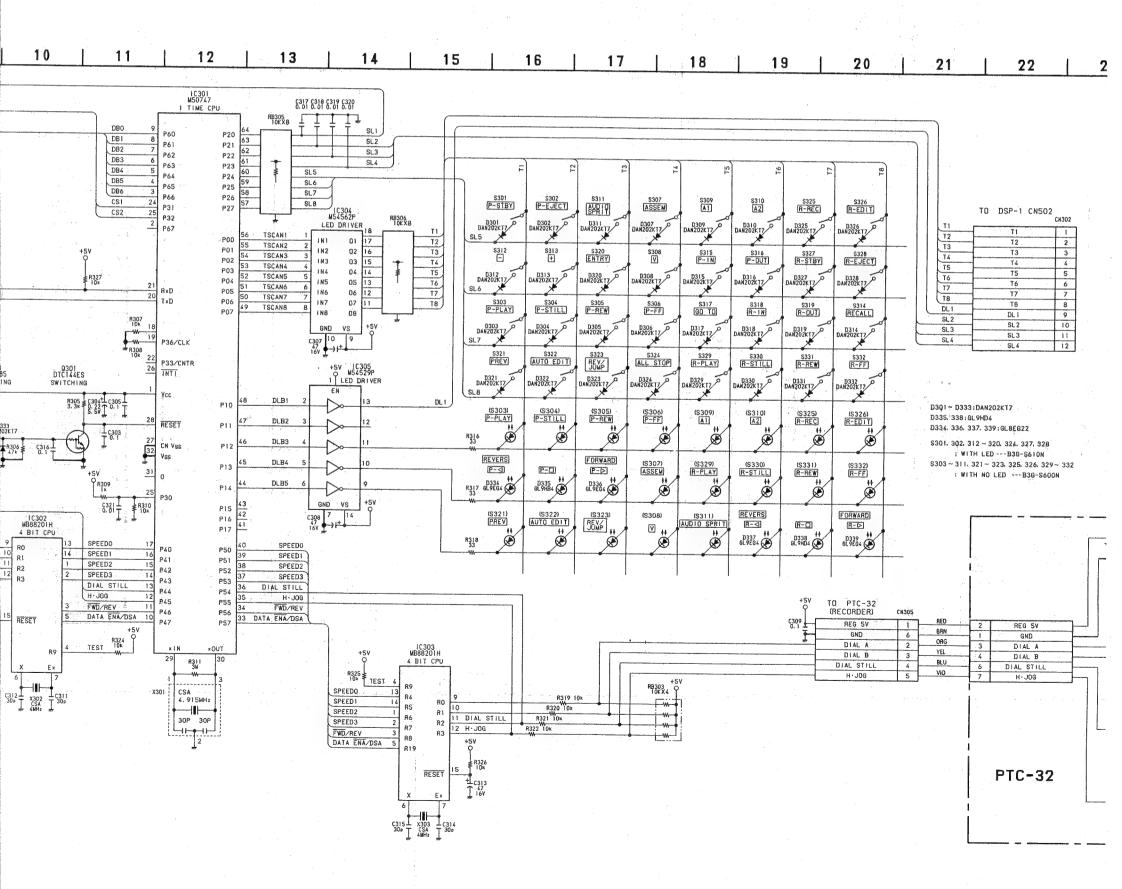


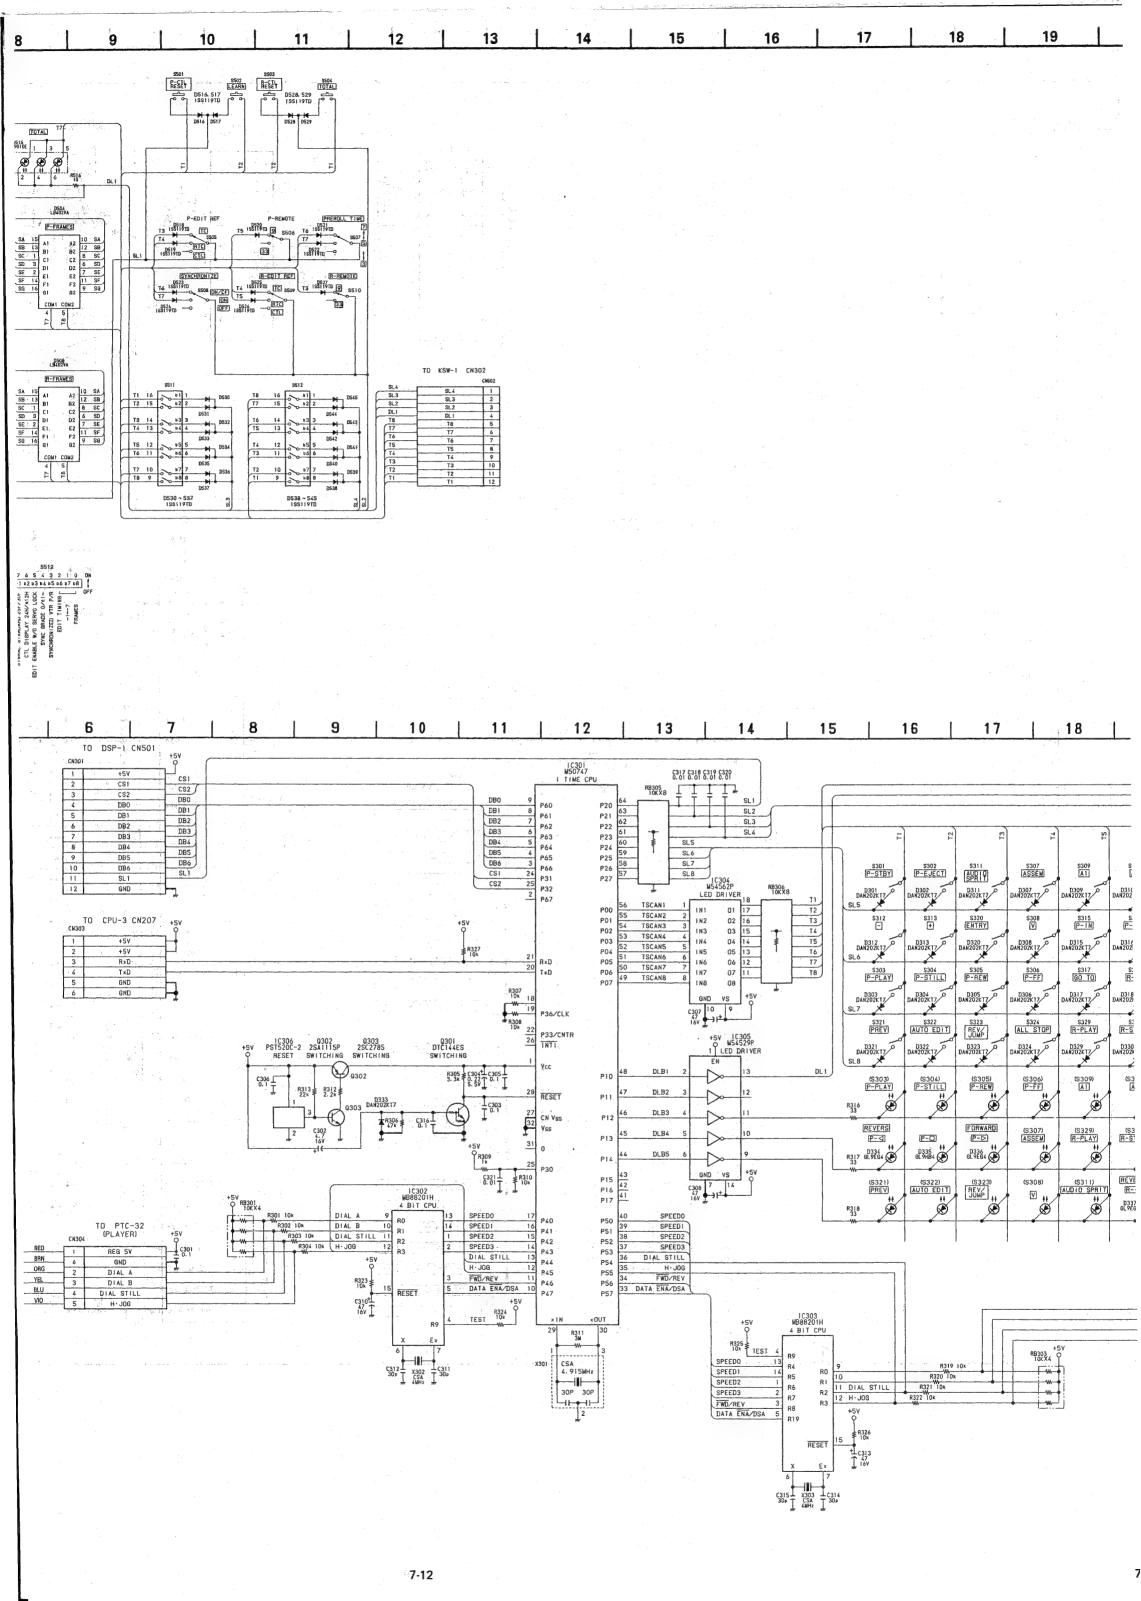


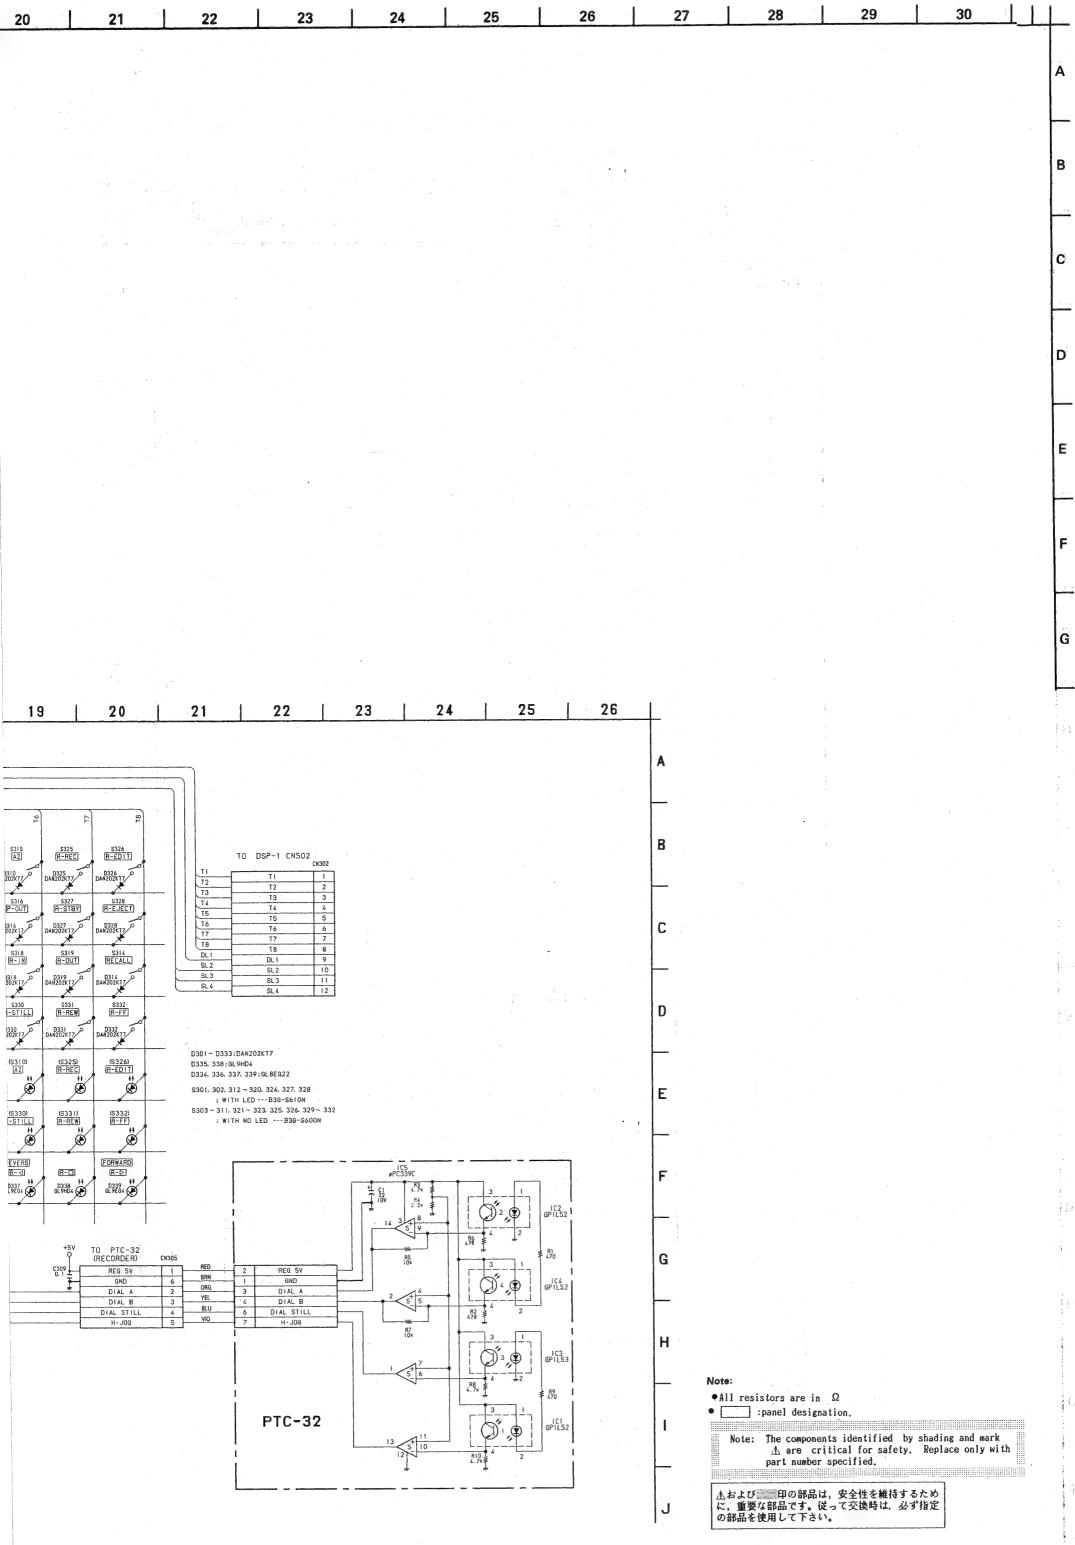


7-13

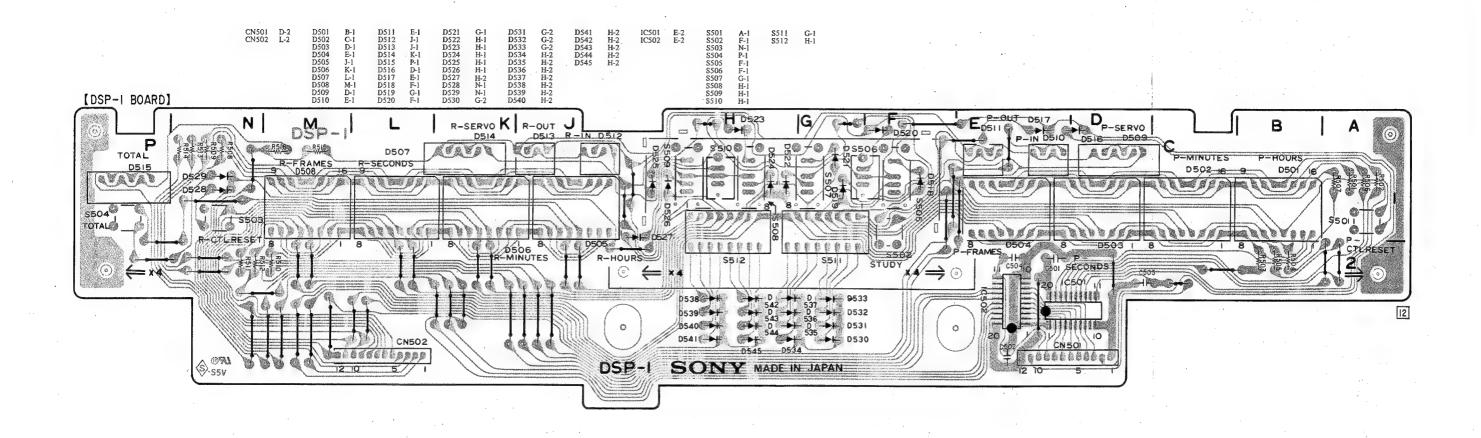



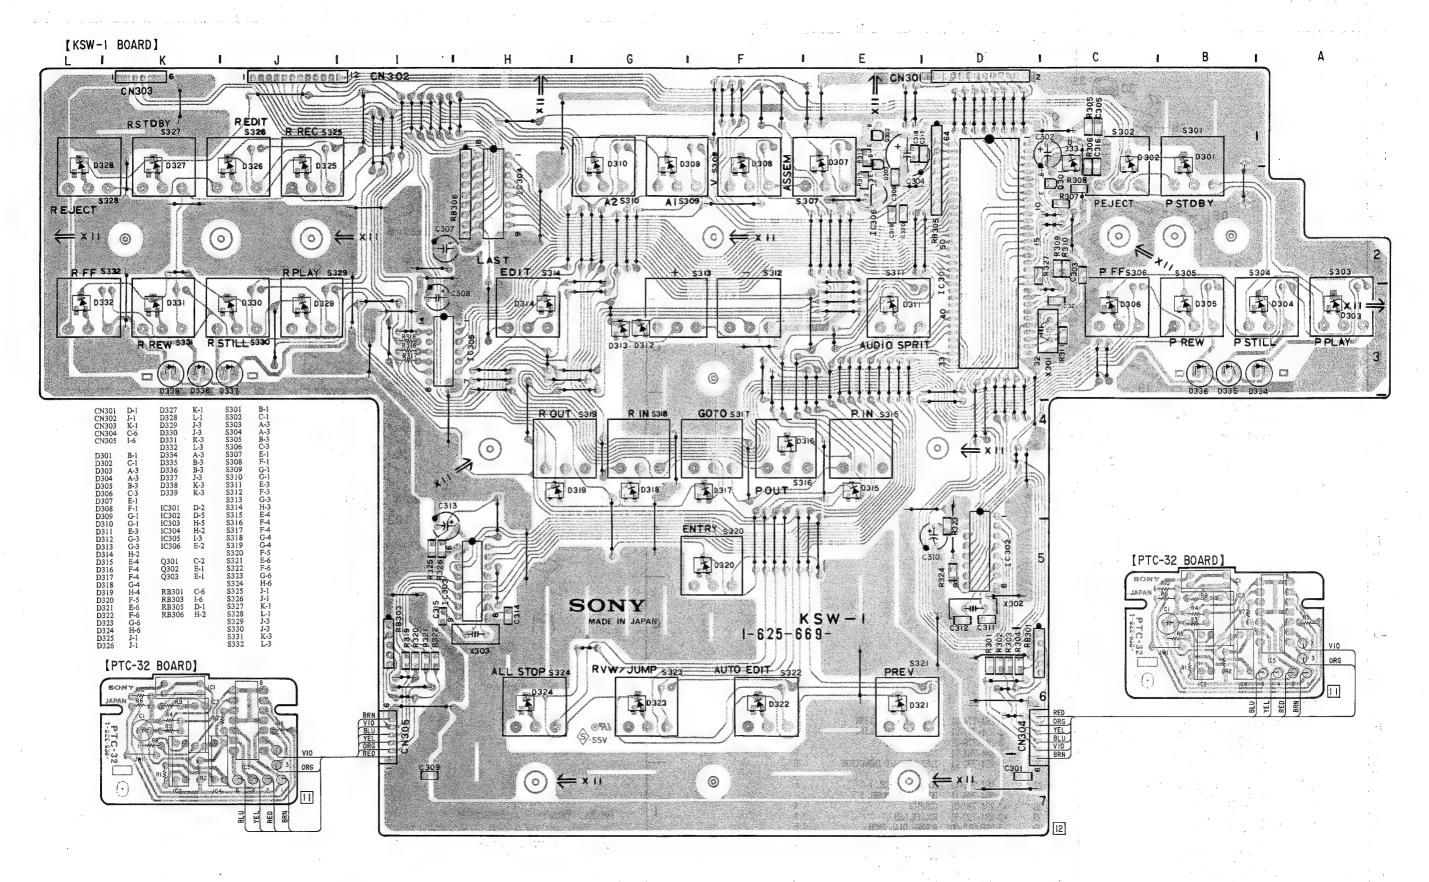



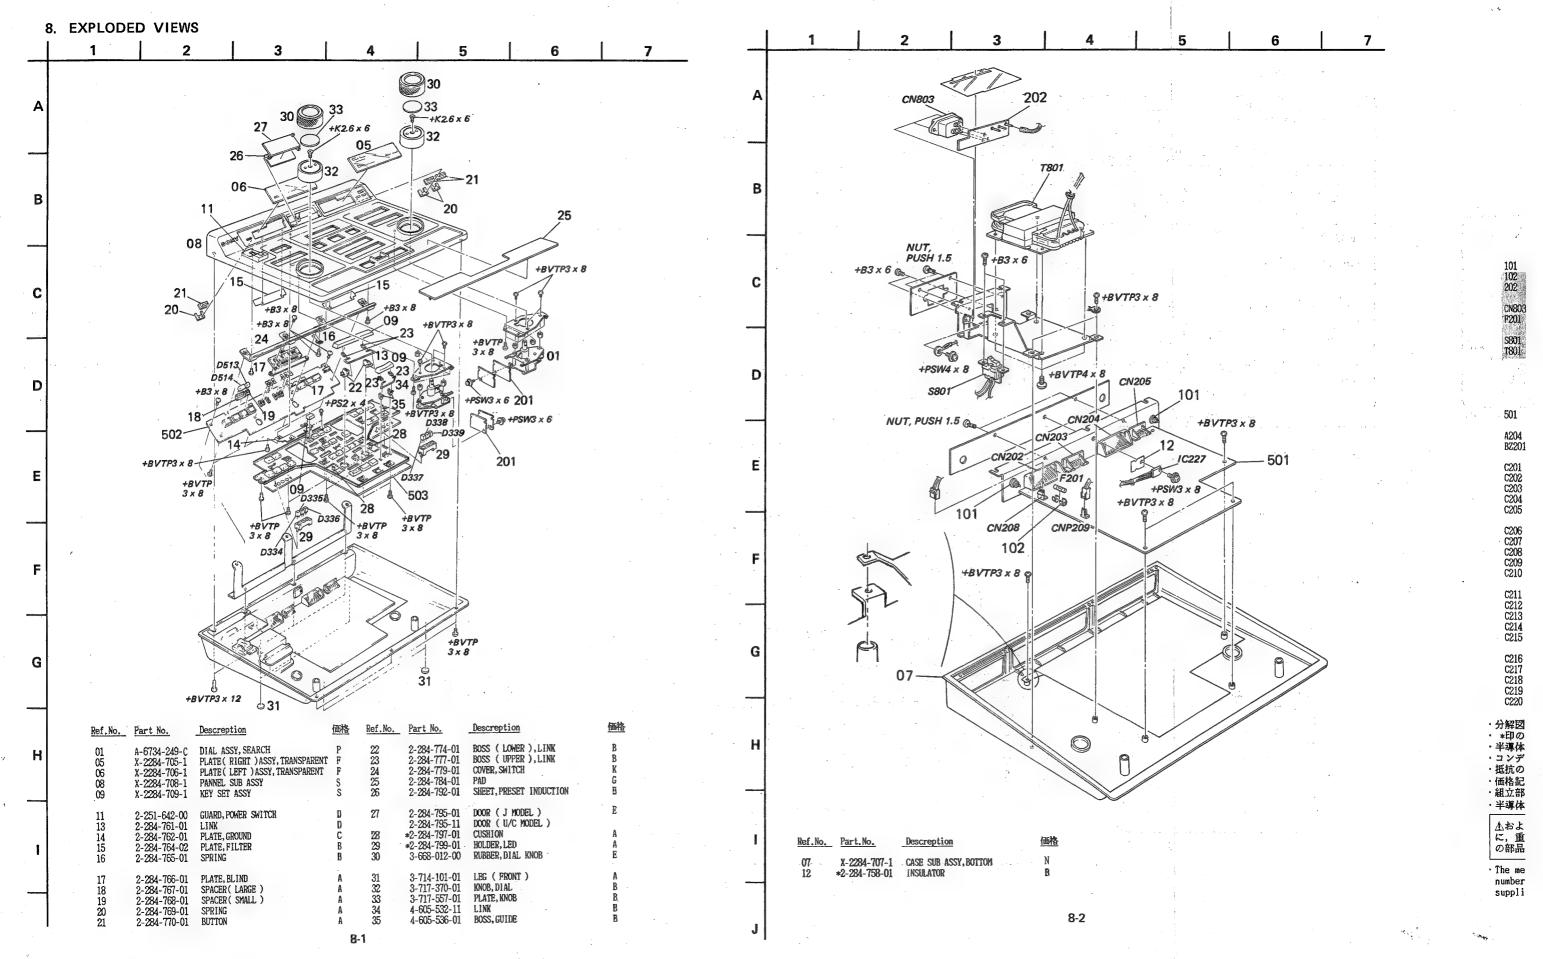

Ref.No. Part.No.	Descreption sories	価格	Ref.No.	Part No.	Descreption		4	西格
Acces	sories							
41-534-754-00 41-551-812-00 41-556-760-11 3-703-372-24	POWER CORD (J MODEL) CORD, POWER (U/C MODEL) CORD, POWER (3 CORE) (EK MODEL CARD, WARRANTY (U/C MODEL)		C221 C223 C224 C225 C226	1-162-290-31 1-162-290-31 1-162-290-31 1-162-290-31 1-162-290-31	CERAMIC CERAMIC CERAMIC CERAMIC CERAMIC	470PF 10% 470PF 10% 470PF 10% 470PF 10% 470PF 10%	50V 50V 50V 50V 50V	A A A A
3-703-373-22 3-786-085-01 3-786-085-11 3-786-085-11 3-799-995-01	REGISTRATION (U/C MODEL) MANUAL INSTRUCTION (J/C MODEL) MANUAL INSTRUCTION (U/C MODEL) MANUAL INSTRUCTION (EK MODEL) CARD, WARRANTY (S-S2) (J MODEL))	C228 C229 C230 C231 C232	1-130-471-00 1-161-327-00 1-162-290-31 1-124-224-00 1-162-215-31	MYLAR CERAMIC CERAMIC ELECT CERAMIC	0.001MF 5% 0.0033MF 20% 470PF 10% 47MF 20% 47PF 5%	50V 16V 50V 6.3V 50V	A A A A
3-795-287-22 3-795-581-21 3-786-193-01 3-786-193-11 3-786-193-21	QUESTIONNAIRE (U/C MODEL) SAFEGUARD, IMPORTANT (U/C MODEL) ERROR MESSAGE CARD (J/C MODEL) ERROR MESSAGE CARD (U/C, EK M ERROR MESSAGE CARD (U/C, EK M	L)) ODEL)	C233 C234 C235 C236 C237	1-131-351-00 1-131-351-00 1-130-471-00 1-161-494-00 1-124-465-00	TANTALUM TANTALUM MYLAR CERAMIC ELECT	4.7MF 10% 4.7MF 10% 0.001MF 5% 0.022MF 0.47MF 20%	25V 25V 50V 25V 50V	C C A A
3-786-193-31	ERROR MESSAGE CARD (EK MODEL		C238 C239 C240 C241 C242	1-162-207-31 1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00	CERAMIC CERAMIC CERAMIC CERAMIC CERAMIC	22PF 5% 0.022MF 0.022MF 0.022MF 0.022MF	50V 25V 25V 25V 25V	A A A A
101 *1-562-261-21 102 *A1-533-189-14 202 *A1-625-671-11 CN803 A1-509-546-00 F201 A1-532-742-11	CONNECTOR, COAXIAL (BNC) HOLDER, FUSE PC BOARD, AC-1 3P INLET FUSE, GLASS TUBE (J, U/C MODEL	F	C243 C244 C245 C246 C247	1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00	CERAMIC CERAMIC CERAMIC CERAMIC CERAMIC	0.022MF 0.022MF 0.022MF 0.022MF 0.022MF	25V 25V 25V 25V 25V	A A A A
A1-332-42-11 本1-532-259-00 5801 本1-570-117-11 1801 本1-449-178-11	FUSE, TIME-LAG (EK MODEL) SHITCH, SEBSAH (AC POWER) TRANSPORMER, POWER	C	C248 C249 C250 C251 C252	1-161-494-00 1-161-494-00 1-161-494-00 1-130-471-00 1-162-288-31	CERAMIC CERAMIC CERAMIC MYLAR CERAMIC	0.022MF 0.022MF 0.022MF 0.022MF 0.001MF 5% 330PF 10%	25V 25V 25V 50V 50V	A A A A
CPU-3	BOARD		C253	1-161-494-00	CERAMIC	0.022MF	25V	A
501 *A-6716-489-A A204 *1-526-654-00	MOUNTED PCB (1), CPU-3 SOCKET, IC 16P	VW G	C254 C255 C256 C257	1-130-475-00 1-161-494-00 1-161-494-00 1-161-494-00	MYLAR CERAMIC CERAMIC CERAMIC	0.0022MF 5% 0.022MF 0.022MF 0.022MF	50V 25V 25V 25V	A A A
BZ201 1-529-025-00 C201 1-119-505-11 C202 1-119-505-11 C203 1-124-473-11 C204 1-131-349-00 C205 1-131-349-00	BUZZER ELECT 4700MF 20% 161 ELECT 4700MF 20% 161 ELECT 1000MF 20% 10 TANTALUM 2.2MF 10% 251 TANTALUM 2.2MF 10% 251	V D V B V B	C258 C259 C260 C261 C262	1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00	CERAMIC CERAMIC CERAMIC CERAMIC CERAMIC	0.022MF 0.022MF 0.022MF 0.022MF 0.022MF	25V 25V 25V 25V 25V	A A A A
C206 1-131-349-00 C207 1-124-247-00 C208 1-162-286-31 C209 1-162-290-31 C210 1-162-290-31	TANTALUM 2.2MF 10% 25% ELECT 10MF 20% 25% CERAMIC 220PF 10% 50% CERAMIC 470PF 10% 50% CERAMIC 470PF 10% 50%	/ A / A / A	C263 C264 C265 C266 C267	1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00	CERAMIC CERAMIC CERAMIC	0.022MF 0.022MF 0.022MF 0.022MF 0.022MF	25V 25V 25V 25V 25V	A A A A
C211 1-162-290-31 C212 1-162-290-31 C213 1-162-290-31 C214 1-161-494-00 C215 1-131-349-00	CERAMIC 470PF 10% 50V CERAMIC 470PF 10% 50V CERAMIC 470PF 10% 50V CERAMIC 0.022MF 25V TANTALUM 2.2MF 10% 25V	I A I A I A	C268 C269 C270 C271 C272	1-161-494-00 1-161-494-00 1-161-494-00 1-161-494-00	CERAMIC CERAMIC CERAMIC CERAMIC	0.022MF 0.022MF 0.022MF 0.022MF 0.022MF	25V 25V 25V 25V 25V	A A A A
C216 1-124-247-00 C217 1-131-349-00 C218 1-131-349-00 C219 1-162-286-31 C220 1-162-290-31	ELECT 10MF 20% 25V TANTALUM 2.2MF 10% 25V TANTALUM 2.2MF 10% 25V CERAMIC 220PF 10% 50V CERAMIC 470PF 10% 50V	I B I B I A	C273 C274 C275 C276 C277	1-161-327-00 1-102-109-00 1-102-109-00 1-102-109-00 1-102-109-00	CERAMIC CERAMIC CERAMIC CERAMIC CERAMIC	180PF 10%	16V 50V 50V 50V 50V	A A A A
*印の部品は常備在庫し 半導体は改良のため予告	なく変更することがあります。 iはμF を, PFはμμF を示し あります。		they are service. when ord • SEMICONDO	rked * * a seldom requipment of these UCTORS case, U: \(\mu\), for the case, \(\mu\), \(\mu\).	ired for rou should be an items.	tine ticipa	ated	

•	I tems marked * are not stocked since
	they are seldom required for routine
	service. Some delay should be anticipated
	when ordering these items.
•	SEMICONDUCTORS
	In each case, U: \mu, for example: UPC: \muPC
•	CAPACITORS

MF: μF, PF: μμF
• RESISTORS
• All resistors are in ohms.

The components identified by shading and mark A are critical for safety.
Replace only with part number specified.

Ref.No.	Part.No.	Descreption	価格	Ref.No.	Part No.	Descreption			価格
CN202 CN203 CN204 CN205 CN207	1-565-331-11 1-563-770-21 1-565-331-11 1-563-770-21 *1-564-005-00	RECEPTACLE (MALE) 33P SOCKET, D-SUB CONNECTOR 9P RECEPTACLE (MALE) 33P SOCKET, D-SUB CONNECTOR 9P PIN, CONNECTOR 6P	L H L H A	IC221 IC222 IC223 IC224 IC225	8-759-208-41 8-759-202-22 8-759-916-80 8-759-208-41 8-759-208-41	IC TMPZ84C30 IC TC74HC74F IC LH0080A IC TMPZ84C30 IC TMPZ84C30)AP-6		K E L K
CN208 CN209	*1-564-104-00 *1-508-742-00	PIN, CONNECTOR 3P PIN, CONNECTOR 3P	A B	IC226 IC227	8-759-913-42 8-759-930-52	IC PST520C-2 IC SI-3052V	:		F J
CNI219 CNI223	*1-526-659-00 *1-526-662-21	SOCKET, IC (DP) 28P SOCKET, IC (DP) 40P	K	9201 9202 9203	8-729-600-60 8-729-600-60 8-729-178-54	TRANSISTOR 2 TRANSISTOR 2	SA1115F)	A A
D201 D202 D203 D204 D205	8-719-911-19 8-719-911-19 8-719-929-18 8-719-110-39 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE HZS10NB1 DIODE RD15ES-B1 DIODE 1SS119	A A A A	R201 R202 R203 R204 R205	1-249-417-11 1-249-435-11 1-249-435-11 1-249-437-11 1-249-417-11	TRANSISTOR 2 CARBON 1K CARBON 33K CARBON 33K CARBON 47K CARBON 1K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	A A A A
D206 D207 D209 D210 D211	8-719-911-19 8-719-929-18 8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A A	R206 R207 R208 R209 R210	1-249-435-11 1-249-405-11 1-249-435-11 1-249-429-11 1-215-493-00	CARBON 33K CARBON 100 CARBON 33K CARBON 10K CARBON 1M	5%	1/4W 1/4W 1/4W 1/4W 1/4W	A. A A A
D212 D213 D214 D215 D216	8-719-911-19 8-719-911-19 8-719-911-19 8-719-502-10 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE S2VB10 DIODE 1SS119	A A E A	R211 R213 R214 R215	1-215-493-00 1-215-493-00 1-215-493-00 1-215-493-00	CARBON 1M CARBON 1M CARBON 1M CARBON 1M	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	A A A
D217 D219 D220 D221	8-719-903-05 8-719-903-05 8-719-911-19 8-719-120-78	DIODE GL-3PR5 DIODE GL-3PR5 DIODE 1SS119 DIODE RD6, 2ES-L3	A A A	R217 R218 R219 R220 R221	1-215-493-00 1-249-405-11 1-249-417-11 1-249-435-11 1-249-435-11	CARBON 1M CARBON 100 CARBON 1K CARBON 33K CARBON 33K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	A A A A
DB201 DB202 DB203 DB204 DB205	1-233-154-11 1-233-154-11 1-233-154-11 1-233-154-11 1-233-154-11	DIODE BLOCK DIODE BLOCK DIODE BLOCK	0000	R222 R223 R224 R225 R226	1-249-437-11 1-249-435-11 1-249-417-11 1-249-405-11 1-249-435-11	CARBON 47K CARBON 33K CARBON 1K CARBON 100 CARBON 33K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	A A A
DB206 DB207 DB208 DB209 DB210	1-233-154-11 1-233-154-11 1-233-154-11 1-233-154-11 1-233-154-11	DIODE BLOCK DIODE BLOCK DIODE BLOCK DIODE BLOCK	с с с	R227 R228 R229 R230 R231	1-215-493-00 1-215-493-00 1-215-493-00 1-215-493-00 1-215-493-00	CARBON 1M CARBON 1M CARBON 1M CARBON 1M CARBON 1M	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	A A A A
IC201 IC202 IC203 IC204 IC205	8-759-701-47 8-759-701-47 8-759-973-00 8-759-973-00 8-759-900-38	IC NJM2930L-05 IC NJM2930L-05 IC CF77267N2 IC CF77267N2 IC SN74LS38N	D K K E	R232 R233 R236 R237 R238	1-215-493-00 1-215-493-00 1-249-439-11 1-249-425-11 1-249-437-11	CARBON 1M CARBON 1M CARBON 68K CARBON 4.7K CARBON 47K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	A A A A
IC206 IC207 IC208 IC209 IC210	8-759-203-00 8-759-942-38 8-759-011-71 8-759-203-83 8-759-220-04	IC TC74IIC174P IC SN75ALS192N IC AM26LS32PC IC TC74IIC4538P IC TC40H004P	F K N J E	R239 R240 R241 R242 R243	1-249-417-11 1-249-441-11 1-249-421-11 1-249-441-11 1-249-421-11	CARBON 1K CARBON 100K CARBON 2.2K CARBON 100K CARBON 2.2K CARBON 2.2K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	A A A
IC211 IC212 IC213 IC214 IC215	8-759-203-68 8-759-916-84 8-759-922-95 8-759-203-83 8-752-324-80	IC TC74IIC4040P IC LH0084A IC MSM82C51ARS IC TC74IIC4538P IC CXK5864ASP-10L	K M G	R245 R246 R247 R248	1-249-421-11 1-249-411-11 1-249-411-11 1-249-411-11	CARBON 2.2K CARBON 330 CARBON 330 CARBON 330		1/4W 1/4W 1/4W 1/4W 1/4W	A A A A
IC216 IC217 IC218 IC219 IC220	8-759-202-26 8-759-203-66 8-759-729-03 8-759-787-53 8-759-202-21	IC TC74IIC138P IC TC74IIC4024P IC NJM29030 IC HBM27C256-LLU1013 IC TC74HC32P	F F N E	R249 R250 R251 R252 R253	1-249-441-11 1-249-441-11 1-249-411-11 1-249-411-11 1-249-411-11	CARBON 100K CARBON 100K CARBON 330 CARBON 330 CARBON 330		1/4W 1/4W 1/4W 1/4W 1/4W	A A A A

[・]価格記号(A~Z)は国内に適用します。
・組立部品の構成部品は備考欄に照合番号で示します。
・半導体の名称で UPC…: μPC…を示します。

[▲]および■■□の部品は、安全性を維持するために、重要な部品です。従って交換時は、必ず指定の部品を使用して下さい。

The mechanical parts with no reference number in the exploded views are not supplied.

Ref.No.	Part.No.	Descreption	価格	Ref.No.	Part No.	Descreption	価格
R254 R255 R256 R257 R258	1-249-434-11 1-249-405-11 1-249-437-11 1-249-429-11 1-249-425-11	CARBON 27K 5% 1/4W CARBON 100 5% 1/4W CARBON 47K 5% 1/4W CARBON 10K 5% 1/4W CARBON 4.7K 5% 1/4W	A A A A	D501 D502 D503 D504 D505	8-719-970-35 8-719-970-35 8-719-970-35 8-719-970-35 8-719-970-35	DIODE LB-402VA DIODE LB-402VA DIODE LB-402VA DIODE LB-402VA DIODE LB-402VA	G G G G
R259 R260 R261 R262 R263	1-215-493-00 1-249-427-11 1-249-418-11 1-249-422-11 1-249-429-11	CARBON 1M 5% 1/4W CARBON 6.8K 5% 1/4W CARBON 1.2K 5% 1/4W CARBON 2.7K 5% 1/4W CARBON 10K 5% 1/4W	A A A A	D506 D507 D508 D509 D510	8-719-970-35 8-719-970-35 8-719-970-35 8-719-901-47 8-719-970-34	DIODE LB-402VA DIODE LB-402VA DIODE LB-402VA DIODE LT-9010D DIODE LT-9002E	G
R264 R265 R266 R267 R268	1-249-419-11 1-249-419-11 1-249-405-11 1-249-419-11 1-249-405-11	CARBON 1.5k 5% 1/4w CARBON 1.5k 5% 1/4w CARBON 100 5% 1/4w CARBON 1.5k 5% 1/4w CARBON 100 5% 1/4w	A A A A	D511 D512 D513 D514 D515	8-719-970-34 8-719-970-34 8-719-970-34 8-719-901-47 8-719-970-33	DIODE LT-9002E DIODE LT-9002E DIODE LT-9002E DIODE LT-9010D DIODE LT-9010E	D D F E
R269 R270 R271 R272 R273	1-249-419-11 1-247-891-00 1-249-425-11 1-249-425-11 1-249-433-11	CARBON 1.5k 5% 1/4w CARBON 330k 5% 1/4w CARBON 4.7K 5% 1/4w CARBON 4.7K 5% 1/4w CARBON 22k 5% 1/4w	A A A A	D516 D517 D518 D519 D520	8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A A
R274 R275 R276 R277 R278	1-249-425-11 1-249-441-11 1-249-429-11 1-249-429-11 1-249-441-11	CARBON 4.7K 5% 1/4W CARBON 100K 5% 1/4W CARBON 10K 5% 1/4W CARBON 10K 5% 1/4W CARBON 100K 5% 1/4W	A A A A	D521 D522 D523 D524 D525	8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A A
R279 R280	1-249-429-11 1-215-394-00	CARBON 10K 5% 1/4W CARBON 75 5% 1/4W	A A	D526 D527	8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119	A
R281 R282 R283	1-249-429-11 1-249-429-11 1-249-421-11	CARBON 10K 5% 1/4W CARBON 10K 5% 1/4W CARBON 2.2K 5% 1/4W	A A A	D528 D529 D530	8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A
R284 R285 R286	1-249-415-11 1-249-421-11 1-249-415-11	CARBON 680 5% 1/4W CARBON 2.2K 5% 1/4W CARBON 680 5% 1/4W	A A	D531 D532 D533 D534 D535	8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A A
RB201 RB202 RB203 RB204 RB205	1-235-671-11 1-235-724-11 1-235-355-11 1-235-671-11 1-235-724-11	RES, ENCAPSULATED CERMET	A A A A	D536 D537 D538 D539 D540	8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A A
RB206 RB207 RB208 RB209 RB210	1-235-724-11 1-235-355-11 1-235-724-11 1-235-736-11 1-235-720-11	RES, ENCAPSULATED CERMET SWITCH, DIP	A A A A	D541 D542 D543 D544 D545	8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19 8-719-911-19	DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119	A A A A
S201 X201	1-570-623-11 1-567-831-11	OSCILLATOR, CERAMIC	r	IC501	8-759-934-78	IC SN74ALS574NS	F
				IC502	8-759-934-78	IC SN74ALS574NS	F
	DSP-1	BOARD		R501 R502 R503	1-249-401-11 1-249-401-11 1-249-401-11	CARBON 47 5% CARBON 47 5% CARBON 47 5%	1/4W A
502	*A-6724-610-A	MOUNTED PCB (1), DSP-1	. UC	R504 R505	1-249-401-11 1-249-401-11	CARBON 47 5% CARBON 47 5%	1/4W A
C501 C502 C503 C504	1-161-494-11 1-161-494-11 1-161-327-00 1-161-327-00	CERAMIC 0.022MF 20% 1	25V A 25V A 16V A 16V A	R506 R507 R508 R509 R510	1-249-401-11 1-249-401-11 1-249-401-11 1-249-401-11 1-249-401-11	CARBON 47 5% CARBON 47 5% CARBON 47 5% CARBON 47 5% CARBON 47 5%	1/4W A 1/4W A 1/4W A
CN501 CN502	*1-564-022-00 *1-564-022-00	PIN, CONNECTOR 12P PIN, CONNECTOR 12P	B B		. 510 701 11	21 0/0	

RM-450/RM-450CE

Ref.No.	Part.No.	Descreption	価格	Ref.No.	Part No.	Descreption	価格
R511 R512 R513 R514 R515	1-249-401-11 1-249-401-11 1-249-401-11 1-249-401-11 1-249-395-11	CARBON 47 5% 1/4W CARBON 47 5% 1/4W CARBON 47 5% 1/4W CARBON 47 5% 1/4W CARBON 15 5% 1/4W	A A A A	D311 D312 D313 D314 D315	8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43	DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K	A A A A
R516	1-249-393-11	CARBON 10 5% 1/4W	Λ	D316 D317	8-719-914-43 8-719-914-43	DIODE DAN202K DIODE DAN202K	Λ A
\$501 \$502 \$503 \$504 \$505	1-553-856-00 1-571-534-11 1-553-856-00 1-553-856-00 1-570-056-11	SWITCH, KEY BOARD SWITCH, KEY BOARD SWITCH, KEY BOARD SWITCH, KEY BOARD SWITCH, SLIDE	A A A C	D318 D319 D320	8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43	DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K	A A A
S506 S507 S508 S509	1-570-331-11 1-570-056-11 1-570-056-11 1-570-056-11	SWITCH, SLIDE SWITCH, SLIDE SWITCH, SLIDE SWITCH, SLIDE	CCC	D322 D323 D324 D325	8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43	DIODE DAN2O2K DIODE DAN2O2K DIODE DAN2O2K DIODE DAN2O2K	A A A
S510 S511 S512	1-570-331-11 1-570-623-11 1-570-623-11	SWITCH, SLIDE SWITCH, DIP SWITCH, DIP	C F F	D326 D327 D328 D329 D330	8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43	DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K	A A A A
503	<u>KSW-1</u> *A-6724-612-A	BOARD MOUNTED PCB, KSW-1	UG	D331 D332 D333 D334 D335	8-719-914-43 8-719-914-43 8-719-914-43 8-719-946-52 8-719-906-48	D10DE DAN202K D10DE DAN202K D10DE DAN202K D10DE GL8BG22 D10DE GL-9HD4	A A A A
C301 C302 C303 C304 C305	1-163-038-00 1-131-351-00 1-163-038-00 1-125-486-11 1-163-038-00	CERAMIC CHIP 0.1MF 25V TANTALUM 4.7MF 10% 25V CERAMIC CHIP 0.1MF 25V DOUBLE LAYERS 220MF 5.5V CERAMIC CHIP 0.1MF 25V	A C A D	D336 D337 D338 D339	8-719-946-52 8-719-946-52 8-719-906-48 8-719-946-52	DIODE GL8EG22 DIODE GL8EG22 DIODE GL-9HD4 DIODE GL8EG22	A A A
C306 C307 C308 C309 C310	1-163-038-00 1-124-236-00 1-124-236-00 1-163-038-00 1-124-236-00	CERAMIC CHIP 0.1MF 25V BLECT 47MF 20% 16V ELECT 47MF 20% 16V CERAMIC CHIP 0.1MF 25V ELECT 47MF 20% 16V	A A A A A	IC301 IC302 IC303 IC304 IC305	8-759-631-31 8-759-937-29 8-759-937-29 8-759-600-68 8-759-600-61	IC M50747-108SP IC MB88201II-539N IC MB88201II-539N IC M54562P IC M54529AP	M F F E
C311	1-163-104-00	CERAMIC CHIP 30PF 5% 50V	A	10306	8-759-913-42	IC PST520C-2	F
C312 C313 C314 C315	1-163-104-00 1-124-236-00 1-163-104-00 1-163-104-00	CERAMIC CHIP 3OPF 5% 50V ELECT 47MF 20% 16V CERAMIC CHIP 3OPF 5% 50V CERAMIC CHIP 3OPF 5% 50V	A A A	9301 9302 9303	8-729-900-89 8-729-600-60 8-729-900-89	TRANMSISTOR DTC144ES TRANMSISTOR 2SA1115P TRANMSISTOR DTC144ES	A A
C316 C317 C318 C319 C320	1-163-038-00 1-163-021-00 1-163-021-00 1-163-021-00 1-163-021-00	CERAMIC CHIP 0.1MF 25V CERAMIC CHIP 0.01MF 50V CERAMIC CHIP 0.01MF 50V CERAMIC CHIP 0.01MF 50V CERAMIC CHIP 0.01MF 50V	A A A A	R301 R302 R303 R304 R305	1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-061-00	METAL GLAZE 10K 5% 1/10W METAL GLAZE 3.3K 5% 1/10W	A A A A
C321	1-163-021-00	CERAMIC CHIP 0.01MF 50V	A	R306 R307	1-216-089-00 1-216-073-00	METAL GLAZE 47K 5% 1/10W METAL GLAZE 10K 5% 1/10W	A A
CN304 CN305	*1-564-016-00 *1-564-016-00	PIN, CONNECTOR 6P PIN, CONNECTOR 6P	A A	R308 R309 R310	1-216-073-00 1-216-049-00 1-216-073-00	METAL GLAZE 10K 5% 1/10W METAL GLAZE 1K 5% 1/10W METAL GLAZE 10K 5% 1/10W	A A A
D301 D302 D303 D304 D305	8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43	DIODE DAN2O2K DIODE DAN2O2K DIODE DAN2O2K DIODE DAN2O2K DIODE DAN2O2K	A A A A	R311 R312 R313 R316 R317	1-216-097-00 1-216-057-00 1-216-057-00 1-249-397-11 1-249-397-11	METAL GLAZE 100K 5% 1/10W METAL GLAZE 2.2K 5% 1/10W METAL GLAZE 2.2K 5% 1/10W CARBON 22 5% 1/4W CARBON 22 5% 1/4W	A A A A
D306 D307 D308 D309 D310	8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43 8-719-914-43	DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K DIODE DAN202K	A A A A	R318 R319 R320 R321 R322	1-249-397-11 1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00	CARBON 22 5% 1/4W METAL GLAZE 10K 5% 1/10W	A A A A

Ref.No.	Part.No.	Descreption	価格	Ref.No.	Part No.	Descreption			価格
R323 R324	1-216-073-00 1-216-073-00	METAL GLAZE 10K 5% 1/10W METAL GLAZE 10K 5% 1/10W	A		PTC-3	2 BOARD			
R325 R326	1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE 10K 5% 1/10W METAL GLAZE 10K 5% 1/10W	A A	201	*1-622-638-11	PC BOARD, PT	C-32		C
R327	1-216-073-00	METAL GLAZE 10K 5% 1/10W	A	CI	1-124-234-00	ELECT	22MF	20% 10V	Α
RB301 RB303	1-235-355-11 1-235-355-11	RES, ENCAPSULATED CERMET RES, ENCAPSULATED CERMET	A A	IC1 IC2	8-719-939-50 8-719-939-50	IC GP1L52 IC GP1L52			Ď
RB305 RB306	1-235-724-11 1-235-724-11	RES, ENCAPSULATED CERMET RES, ENCAPSULATED CERMET	A A	IC3 IC4	8-719-940-86 8-719-939-50	IC GP1L53 IC GP1L52			E D
S301	1-571-504-11	SWITCH, KEY BOARD	C	IC5	8-759-133-90 1-249-413-11	. IC UPC339C CARBON	470 5%	1/4W	J
S302 S303	1-571-504-11 1-571-505-11	SWITCH, KEY BOARD SWITCH, KEY BOARD (WITH LED)	C	R1 R2	1-249-413-11 1-249-413-11 1-249-425-11	CARBON CARBON	470 5% 4.7K 5%	1/4W	A A
S304 S305	1-571-505-11 1-571-505-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD (WITH LED)	č	R3 R4 R5	1-249-421-11 1-249-429-11	CARBON CARBON	2.2K 5% 10K 5%	. 1/4W	A A
\$306 \$307	1-571-505-11 1-571-505-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD (WITH LED)	C	R6	1-249-413-11	CARBON	470 5%		A
S308 S309	1-571-505-11 1-571-505-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD (WITH LED)	C	R7 R8	1-249-429-11 1-249-425-11	CARBON CARBON	10K 5% 4.7K 5%	1/4W	A
S310	1-571-505-11	SWITCH, KEY BOARD (WITH LED)	С	R9 R10	1-249-413-11 1-249-425-11	CARBON CARBON	470 5% 4.7K 5%		A
\$311 \$312	1-571-505-11 1-571-504-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD	C C						
S313 S314	1-571-504-11 1-571-504-11	SWITCH, KEY BOARD SWITCH, KEY BOARD	С						
S315	1-571-504-11	SWITCH, KEY BOARD	C						
S316 S317	1-571-504-11 1-571-504-11	SWITCH, KEY BOARD SWITCH, KEY BOARD	C						
S318 S319	1-571-504-11 1-571-504-11 1-571-504-11	SWITCH, KEY BOARD SWITCH, KEY BOARD SWITCH, KEY BOARD	C						
\$320 \$321	1-571-504-11	SWITCH, KEY BOARD (WITH LED)	С						
\$322 \$323	1-571-505-11 1-571-505-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD (WITH LED)	Č						
\$324 \$325	1-571-504-11 1-571-505-11	SWITCH, KEY BOARD SWITCH, KEY BOARD (WITH LED)	Č C						
\$326	1-571-505-11	SWITCH, KBY BOARD (WITH LED)	С	•					
S327 S328	1-571-504-11 1-571-504-11	SWITCH, KEY BOARD SWITCH, KEY BOARD	C						
\$329 \$330	1-571-505-11 1-571-505-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD (WITH LED)	C						
\$331	1-571-505-11 1-571-505-11	SWITCH, KEY BOARD (WITH LED) SWITCH, KEY BOARD (WITH LED)	C		٠				
S332 X301	1-571-505-11	OSCILLATOR, CERAMIC	U						
X302 X303	1-567-192-31 1-567-192-31	OSCILLATOR, CERAMIC OSCILLATOR, CERAMIC	C						
1000	2 001 100 01		-						